



# *Jacuzzi*<sup>®</sup> Swim Spas J-14 | J-16 | J-19 | J-19DT POWERACTIVE™ & POWERPRO™

---

## 2025 SWIM SPA INSTALLATION GUIDE

**CAUTION: THIS GUIDE IS FOR REFERENCE ONLY!**

All electrical installation must be completed by a qualified electrician in accordance with all National, Regional and Local Codes and Regulations in effect at the time of installation  
**JACUZZI HOT TUBS AND ITS AFFILIATES WILL NOT BE RESPONSIBLE FOR ANY ERRORS IN INSTALLATIONS OR CODE INFRACTIONS.**

EFFECTIVE DATE: January 1, 2025 (supersedes all others)



# 2025 JACUZZI® SWIM SPA COLLECTION INSTALLATION MANUAL

## TABLE OF CONTENTS:

|                                                                                                                 |         |                                                                                              |            |
|-----------------------------------------------------------------------------------------------------------------|---------|----------------------------------------------------------------------------------------------|------------|
| <b>1. Types of installs</b>                                                                                     | Page 1  | Cross Section Side View of 2025 Jacuzzi® PowerActive™ & PowerPro™ Swim Spas Install Inground | Page 21-23 |
| 1.1 Free Standing with Cabinet above ground                                                                     |         |                                                                                              |            |
| 1.2 Free Standing in Deck with or without cabinet                                                               |         |                                                                                              |            |
| 1.3 Below Grade Indoor                                                                                          |         | 5.7 Service Access                                                                           | Page 25    |
| 1.4 Below Grade Outdoor                                                                                         |         | 5.8 Water Test                                                                               |            |
| <b>2. Model, Specifications and Electrical</b>                                                                  | Page 2  | 5.9 Overall Support                                                                          |            |
| 2.1 Model and Series                                                                                            |         | 5.10 Insulation                                                                              |            |
| Shell Dimensions and Weights                                                                                    |         | 5.11 Set Up and Assembly                                                                     |            |
| 2.2 Electrical Specifications                                                                                   | Page 5  | 5.12 Equipment Protection                                                                    |            |
| 2.3 Wiring Size                                                                                                 |         | <b>6. Serviceability, Accessibility and Protection</b>                                       | Page 27    |
| 2.4 GFCI Installations for North America                                                                        | Page 6  | 6.1 Equipment Protection                                                                     |            |
| 2.4 RCD Installations for Europe                                                                                | Page 9  | 6.2 Serviceability                                                                           |            |
| <b>3. Delivery and Handling Considerations</b>                                                                  | Page 11 | 6.3 Rodent Protection                                                                        |            |
| 3.1 Retailer Delivery                                                                                           |         | <b>7. Filling and Draining</b>                                                               | Page 28    |
| 3.2 Direct Deliveries                                                                                           |         | 7.1 General Considerations                                                                   |            |
| 3.3 Crane Deliveries                                                                                            |         | 7.2 Indoor Installations                                                                     |            |
| 3.4 Fork Lift Deliveries                                                                                        |         | 7.3 Outdoor Installations                                                                    |            |
| 3.5 Roller Deliveries                                                                                           |         | <b>8. Auxiliary Heating Options</b>                                                          | Page 28    |
| 3.6 Warnings                                                                                                    |         | 8.1 Gas Heaters                                                                              |            |
| <b>4. Above Grade (Base of Support)</b>                                                                         | Page 12 | 8.2 Other Methods                                                                            |            |
| 4.1 Preparation                                                                                                 |         | 8.3 Auxiliary By Pass                                                                        |            |
| 4.2 Concrete                                                                                                    |         | <b>9. Ventilation, Humidity Control, Other Indoor Considerations</b>                         | Page 29    |
| 4.3 Rooftop / Balcony Install                                                                                   |         | 9.1 Humidity Control                                                                         |            |
| 4.4 IMPORTANT: Swim Spa Frame Shim Installation (Applies to All Installations)                                  |         | 9.2 Ventilation                                                                              |            |
| Cross Section Side View of 2025 Jacuzzi® PowerActive™ & PowerPro™ Swim Spas Install Above Ground                | Page 13 | 9.3 Hardcover                                                                                |            |
| Topside View of 2025 Jacuzzi® PowerActive™ & PowerPro™ Swim Spas Install Above Ground                           | Page 15 | 9.4 Floor drainage                                                                           |            |
| <b>5. Below Grade or Partial In Grade Installations</b>                                                         | Page 17 | <b>10. Hardcover Storage</b>                                                                 | Page 30    |
| 5.1 Backfilling Exclusion                                                                                       |         | 10.1 Hardcover                                                                               |            |
| 5.2 Excavation                                                                                                  |         | 10.2 Pool Shed                                                                               |            |
| 5.3 Vault/Bunker Specs                                                                                          |         | <b>11. By Laws and Disclaimer</b>                                                            | Page 30    |
| 5.4 Base of Support                                                                                             |         | 11.1 Building Code                                                                           |            |
| 5.5 Crawl Space                                                                                                 |         | 11.2 Excavation                                                                              |            |
| 5.6 Ground Water                                                                                                |         | 11.3 Recommendations                                                                         |            |
| Top View of 2025 Jacuzzi® PowerActive™ & PowerPro™ Swim Spas Inground...                                        | Page 18 | 11.4 Professionals                                                                           |            |
| Cross Section End View of 2025 Jacuzzi® PowerActive™ & PowerPro™ Swim Spas Full & Partial Inground Installation | Page 20 | 11.5 Sunlight                                                                                |            |
|                                                                                                                 |         | Notes                                                                                        | Page 32    |

# I. Types of installations:

## I.1 Free Standing with cabinet above ground

This installation refers to a swim spa that is placed on a concrete pad, above ground and with a Jacuzzi® Cabinet. Can be adjacent to a deck or butted up to a deck.



## I.2 Free Standing in Deck

This installation refers to a swim spa that is placed on a concrete pad, above ground and with or without a Jacuzzi® cabinet. This swim spa is surrounded on one or two sides by deck.



## I.3 Below Grade Outdoor

This installation refers to a swim spa that is placed on a concrete pad, below grade and without a Jacuzzi® Cabinet. Can be partially or fully recessed in the ground.

## I.4 Below Grade Indoor

Indoor installations of a swim spa must be placed on a concrete pad. Swim spas can be partially or fully recessed in the floor.



## 2. Model Series, Specification and Electrical



### 2.1

#### 2025 14FT. / 4.37 M JACUZZI® POWERACTIVE™ SWIM SPA

SEATING: 5 Person

**DIMENSIONS:**  
172.25" X 92.00" X 52.75"  
(438 cm x 234 cm x 134 cm)

**USABLE SWIM AREA:**  
127" (323 cm)

**DRY WEIGHT:** 2,129 lbs / 966 kg

**FILLED WEIGHT (VOLUME):**  
15,718 lbs / 7,132 kg

**WATER CAPACITY (VOLUME):**  
1,629 US gallons / 6,166 L

**PUMP ONE:**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



#### 2025 14FT. / 4.37 M JACUZZI® POWERPRO™ SWIM SPA

SEATING: 5 Person

**DIMENSIONS:**  
172.25" X 92.00" X 52.75"  
(438 cm x 234 cm x 134 cm)

**USABLE SWIM AREA:**  
127" (323 cm)

**DRY WEIGHT:** 2,129 lbs / 966 kg

**FILLED WEIGHT (VOLUME):**  
15,718 lbs / 7,132 kg

**WATER CAPACITY (VOLUME):**  
1,629 US gallons / 6,166 L

**PUMP ONE:**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO & THREE**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



#### 2025 16FT. / 4.72 M JACUZZI® POWERACTIVE™ SWIM SPA

SEATING: 4 Person

**DIMENSIONS:**  
184.75" X 92.00" X 52.75"  
(469 cm x 234 cm x 134 cm)

**USABLE SWIM AREA:**  
127" (323 cm)

**DRY WEIGHT:** 2,600 lbs / 1,180 kg

**Filled Weight (Volume):**  
19,394 lbs / 8,799 kg

**WATER CAPACITY (VOLUME):**  
2,012 US gallons / 7,620 L

**PUMP ONE:**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



#### 2025 16FT. / 4.72 M JACUZZI® POWERPRO™ SWIM SPA

SEATING: 4 Person

**DIMENSIONS:**  
184.75" X 92.00" X 52.75"  
(469 cm x 234 cm x 134 cm)

**USABLE SWIM AREA:**  
127" (323 cm)

**DRY WEIGHT:** 2,600 lbs / 1,180 kg

**Filled Weight (Volume):**  
19,394 lbs / 8,799 kg

**WATER CAPACITY (VOLUME):**  
2,012 US gallons / 7,620 L

**PUMP ONE:**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO & THREE**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A

## 2. Model Series, Specification and Electrical Continued...



### 2025 19FT. / 5.58 M JACUZZI® POWERACTIVE™ SWIM SPA

**SEATING:** 4 Person

**DIMENSIONS:**  
220.75" X 92.00" X 52.75"  
(558 cm x 234 cm x 134 cm)

**USABLE SWIM AREA:**  
148" (376 cm)

**DRY WEIGHT:** 2,660 lbs / 1,207 kg

**Filled Weight (Volume):**  
22,948 lbs / 10,412 kg

**WATER CAPACITY (VOLUME):**  
2,430 US gallons / 9,205 L

**PUMP ONE:**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



### 2025 19FT. / 5.58 M JACUZZI® POWERPRO™ SWIM SPA

**SEATING:** 4 Person

**DIMENSIONS:**  
220.75" X 92.00" X 52.75"  
(558 cm x 234 cm x 134 cm)

**USABLE SWIM AREA:**  
148" (376 cm)

**DRY WEIGHT:** 2,660 lbs / 1,207 kg

**Filled Weight (Volume):**  
22,948 lbs / 10,412 kg  
**WATER CAPACITY (VOLUME):**  
2,430 US gallons / 9,205 L

**PUMP ONE:**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO & THREE**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



### 2025 19DT / 5.61 M JACUZZI® POWERACTIVE™ SWIM SPA

**SEATING:** 6 Person

**DIMENSIONS:**  
220.75" X 92.00" X 52.75"  
561 cm x 234 cm x 134 cm

**USABLE SWIM AREA:**  
113" (287 cm)

**DRY WEIGHT:** 2,660 lbs / 1,208 kg

**Filled Weight (Volume):**  
18,235 lbs / 8,274 kg

**Swim Tank (Volume):**  
1,570 US gallons / 5,946 L

**Hot Tub (Volume):**  
296 US gallons / 1,120 L

**PUMP 1 (SWIM TANK) & PUMP ONE & TWO (HOT TUB END):**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO (SWIM TANK)**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



### 2025 19DT / 5.61 M JACUZZI® POWERPRO™ SWIM SPA

**SEATING:** 6 Person

**DIMENSIONS:**  
220.75" X 92.00" X 52.75"  
561 cm x 234 cm x 134 cm

**USABLE SWIM AREA:**  
113" (287 cm)

**DRY WEIGHT:** 2,660 lbs / 1,208 kg

**Filled Weight (Volume):**  
18,235 lbs / 8,274 kg

**Swim Tank (Volume):**  
1,570 US gallons / 5,946 L

**Hot Tub (Volume):**  
296 US gallons / 1,120 L

**PUMP 1 (SWIM TANK) & PUMP ONE & TWO (HOT TUB END):**  
North America  
(60 Hz): 2SP, 4HP, 12.0/1.0 AMPS  
Europe  
(50 Hz): 2SP, 3HP, 8.6/2.6 AMPS

**PUMP TWO & THREE (SWIM TANK)**  
North America  
(60 Hz): 1SP, 5HP, 15A  
Europe  
(50 Hz): 1SP, 4HP, 12.8A



## 2.2 Electrical Specifications

**SAFETY COMES FIRST. WHEN INSTALLING AND USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS MUST ALWAYS BE FOLLOWED!**

### 1. READ AND FOLLOW ALL INSTRUCTIONS

2. Electrical installation must be completed by a qualified electrician in accordance with all National, Regional and Local Codes and Regulations in effect at the time of installation.
3. Connect only to a dedicated circuit protected by a class 'A' two-pole ground fault circuit interrupter (GFCI).
4. Use copper conductors only!
5. The swim spa equipment and all electrical plugs, outlets and lights within 5 ft. (1.5 m) of the unit must be G.F.C.I protected. Consult your electrician or local electrical authority for further details.
6. A green colored terminal or a terminal marked "G", "GR", "Ground", or "Grounding" is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding by means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors supplying the equipment.
7. At least two lugs marked "BONDING LUGS" are provided on the external surface or on the inside of the supply terminal box or compartment. To reduce the risk of electric shock, connect the local common bonding grid in the area of the swim spa to these terminals with an insulated or bare copper conductor not smaller than No.6 AWG (Canada/Europe)/No.8 AWG (USA).
8. All field installed metal components such as rails, ladders, drains or other similar hardware within 10 ft. (3 m) of the swim spa shall be bonded to the equipment grounding bus with copper conductors not smaller than No.6 AWG.

Jacuzzi® highly recommends the use of a new Siemens GFCI breaker for all of its products.

## 2.3 Wiring Size

Please consult your applicable electrical codes related to the size of the breakers and the wire. Take into consideration the length of the cable and increases as required.

### IMPORTANT NOTE:

This guide is for standard installations where the wire run is 50 ft. (15 m) or less. For longer wire runs, consult a qualified electrician.

### Power Requirements

Jacuzzi® Swim Spas are designed to provide optimum performance and flexibility of use when connected to their maximum electrical service. They are configured at the factory. The most common electrical connections are listed below.

### G.F.C.I./R.C.D. APPLICATION GUIDE FOR JACUZZI SWIM SPA SERIES

#### NORTH AMERICA

|                                       |                      |
|---------------------------------------|----------------------|
| POWERPLAY J-13/POWERACTIVE J-14/16/19 | 50A                  |
| POWERACTIVE J-19DT                    | (40A Spa / 50A Swim) |
| POWERPRO J-14/16/19                   | 60A                  |
| POWERPRO J-19DT                       | (40A Spa / 60A Swim) |

#### EUROPE (SINGLE PHASE)

|                                       |                      |
|---------------------------------------|----------------------|
| POWERPLAY J-13/POWERACTIVE J-14/16/19 | 40A                  |
| POWERACTIVE J-19DT                    | (20A Spa / 40A Swim) |
| POWERPRO J-14/16/19                   | 40A                  |
| POWERPRO J-19DT                       | (20A Spa / 40A Swim) |

### IMPORTANT NOTE:

This guide is for standard installations where the wire run is 15m (50 ft.) or less. For longer wire runs, consult a qualified electrician.

## 2.4 North American GFCI Installation


Installation of the Siemens GFCI - Circuit Breaker, Circuit Breaker, including ampere sizing and selection of conductor size and type, must be performed by a qualified electrician in accordance with the National Electrical Code, or the Canadian Electrical Code, and all Federal, State / Provincial and local codes and regulations in effect at the time of installation. Hydropool highly recommends the use of a new GFCI breaker for all of its products. Older GFCI's may have tripping issues.

### NORTH AMERICA:

#### OPTION ONE:

J-14, J-16 & J-19  
POWERACTIVE™ Only  
240 V / 60 HZ / 50A


#### 240 VOLT SINGLE PACK WIRING

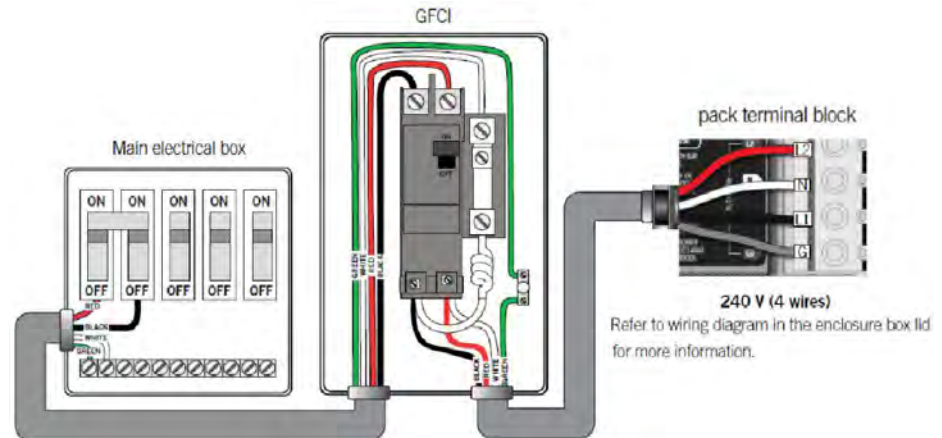

#### OPTION TWO:

J-14, J-16 & J-19  
POWERACTIVE™ &  
POWERPRO™  
(POWERACTIVE™ with  
Additional Optional Heater Only)  
240 V / 60 HZ / 50A


#### 240 VOLT TWO PACK WIRING

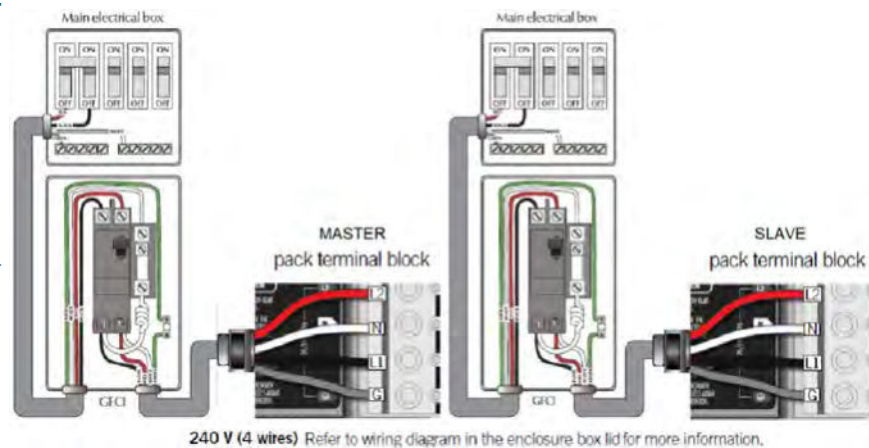

#### OPTION THREE:

J-14, J-16 & J-19  
POWERACTIVE™ &  
POWERPRO™  
(POWERACTIVE™ with  
Additional Optional Heater Only)  
240 V / 60 HZ / 50A

#### 240 VOLT TWO PACK WIRING (ALTERNATE WIRING OPTION USING A DISTRIBUTION BLOCK)

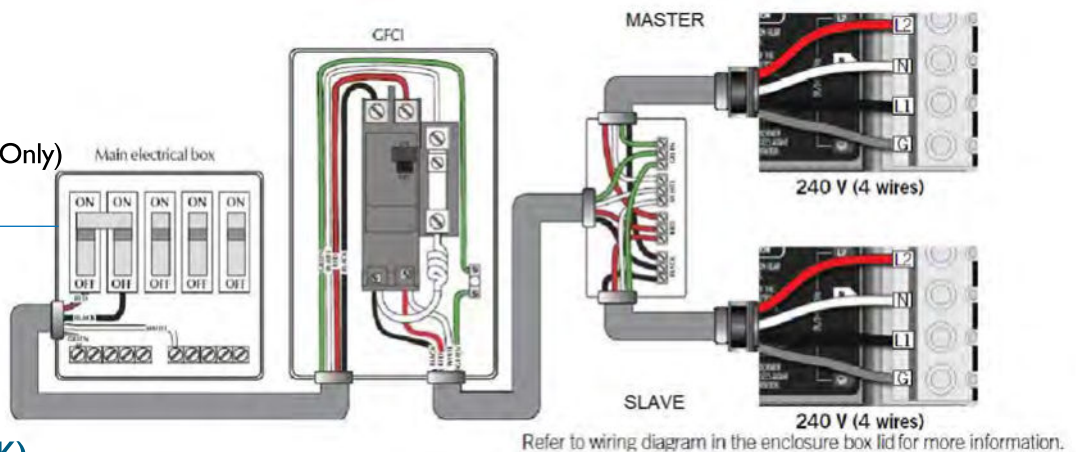

## 2.4 North American GFCI Installation Continued...

### NORTH AMERICA:

#### OPTION ONE:

J-19 DT POWERACTIVE™

Swim Spa:


240V / 60 HZ

40A Hot Tub / 50A Swim Spa


#### 240 VOLT

#### SINGLE GFCI WIRING (MASTER ONLY)

HOT TUB  
END 40A

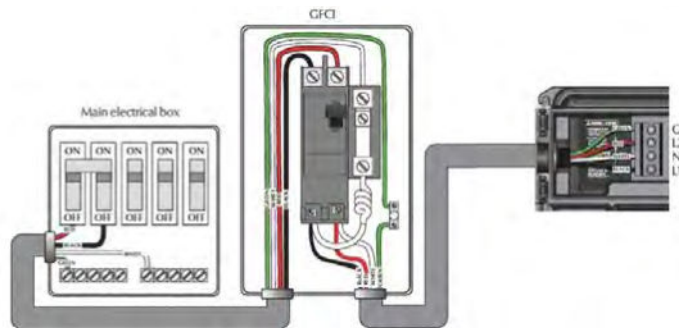

SWIM SPA  
END 50A

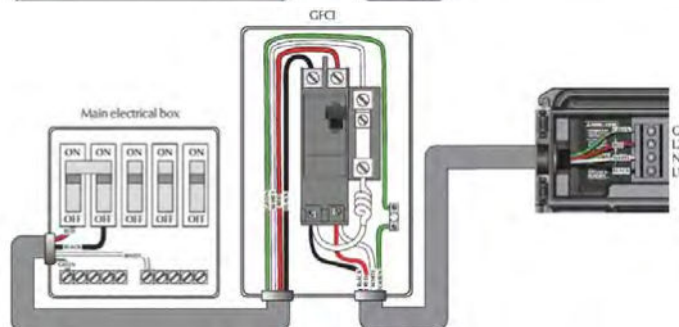

#### OPTION TWO:

J-19DT POWERACTIVE™ Swim Spa:

(POWERACTIVE™ with  
Additional Optional Heater Only)


240V / 60 HZ

40A Hot Tub / 50A Swim Spa

#### 240 VOLT

#### DUAL GFCI WIRING

SWIM SPA  
END 50A

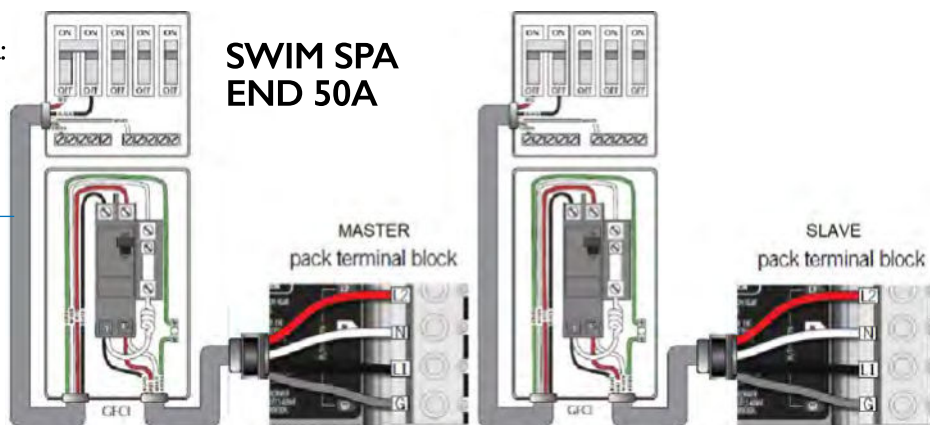

240 V (4 wires) Refer to wiring diagram in the enclosure box lid for more information.

#### OPTION THREE:

J-19DT POWERACTIVE™ Swim Spa:

(POWERACTIVE™ with  
Additional Optional Heater Only)


240V / 60 HZ

40A Hot Tub / 50A Swim Spa

#### 240 VOLT

#### SINGLE GFCI WIRING (MASTER / SLAVE HEATER)

SWIM SPA  
END 50A

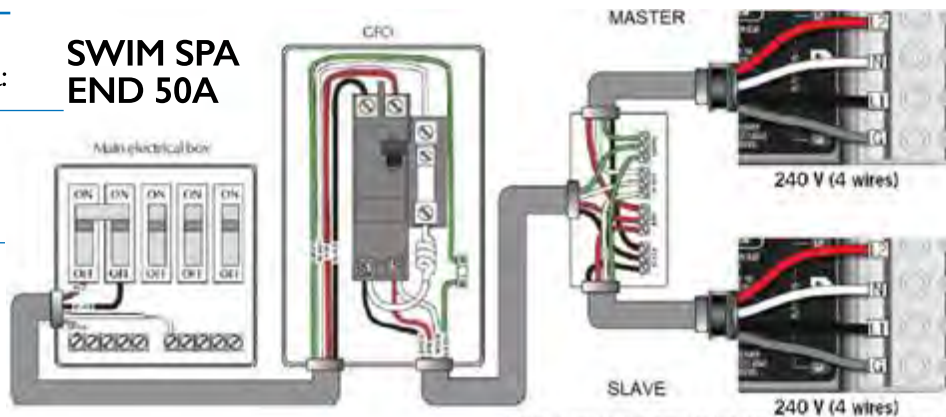

Refer to wiring diagram in the enclosure box lid for more information.

## NORTH AMERICA:

### OPTION ONE:


J-19 DT POWERPRO™

Swim Spa:

240V / 60 HZ

40A Hot Tub / 60A Swim Spa

### 240 VOLT SINGLE GFCI WIRING (MASTER ONLY)

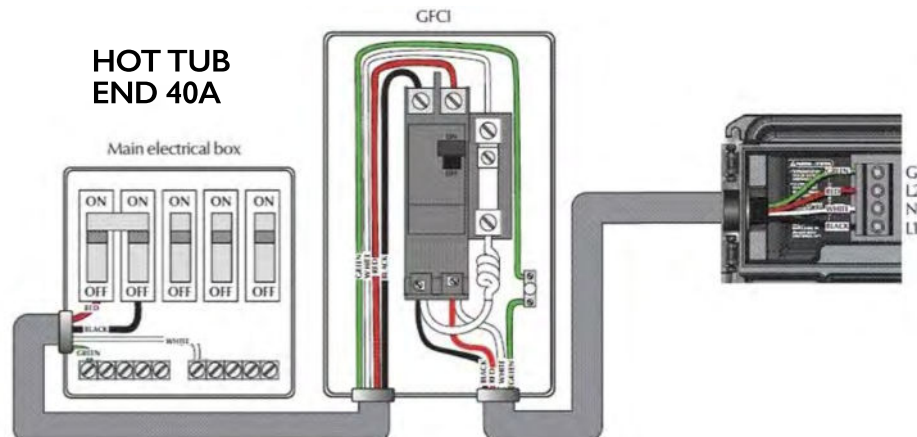

### OPTION TWO:


J-19 DT POWERPRO™

Swim Spa:

240 V / 60 HZ /

40A Hot Tub / 60A Swim Spa

### 240 VOLT DUAL GFCI WIRING

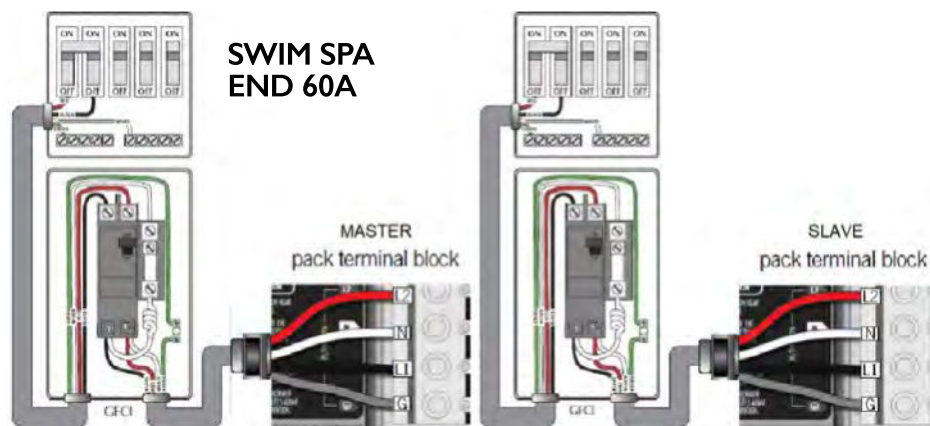

240 V (4 wires) Refer to wiring diagram in the enclosure box lid for more information.


### OPTION THREE:

J-19 DT POWERPRO™ Swim Spa:

240 V / 60 HZ /

40A Hot Tub / 60A Swim Spa

### 240 VOLT SINGLE GFCI WIRING (MASTER / SLAVE HEATER)

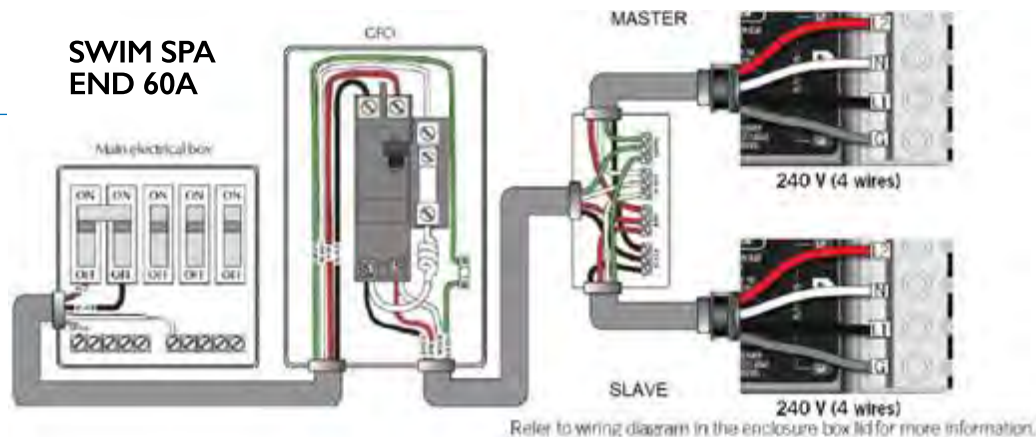

Refer to wiring diagram in the enclosure box lid for more information.

## 2.5 European R.C.D. Installation

### IMPORTANT NOTE:


**Installation of the Siemens R.C.D. - Circuit Breaker**, including ampere sizing, GFCI Security Breaker and selection of conductor size and type, must be performed by a qualified electrician in accordance with National, Regional and Local Codes and Regulations in effect at the time of installation.

## EUROPE:

### OPTION ONE:

**POWERACTIVE™ Only**  
230V / 50 HZ / 40A


# 230 VOLT 50 Hz SINGLE PHASE RCD WIRING (MASTER ONLY)

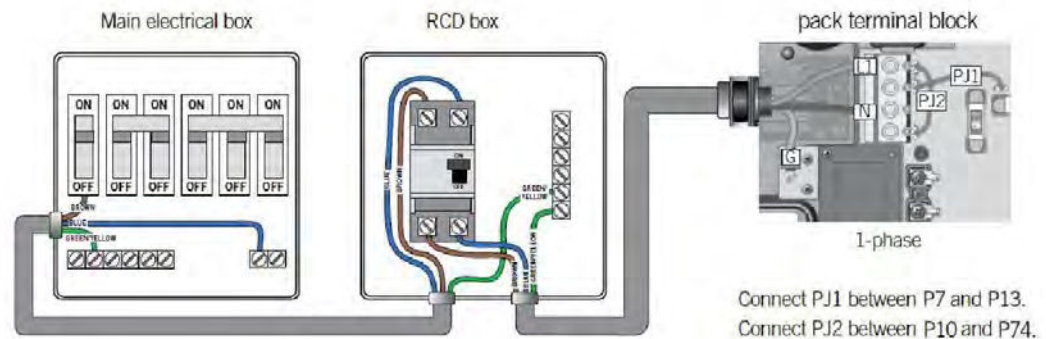

## OPTION TWO:

**J-14, J-16 & J-19  
POWERACTIVE™ &  
POWERPRO™ Swim Spa:  
230V / 50 HZ / 40A**


## 230 VOLT 50 Hz SINGLE PHASE RCD WIRING (DUAL SPA PACKS)

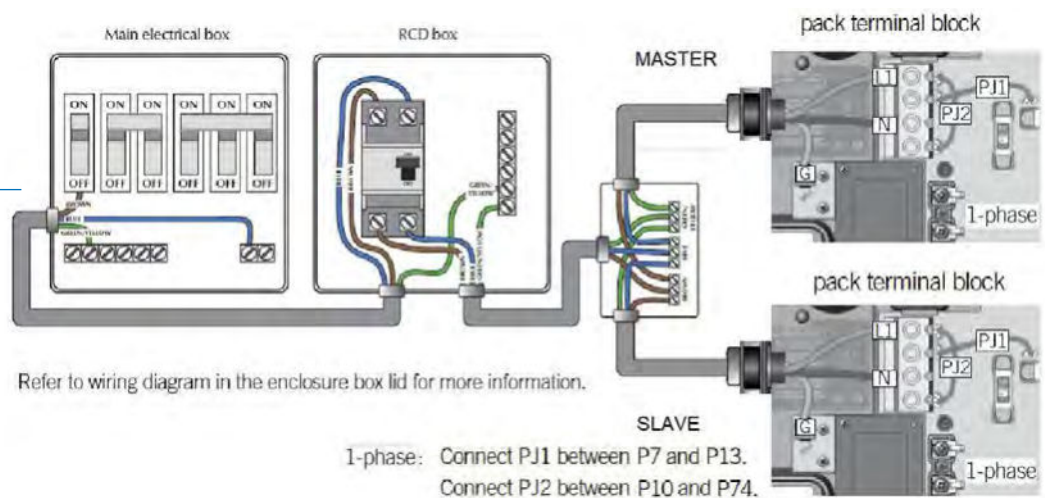

### OPTION THREE:

**J-14, J-16 & J-19  
POWERACTIVE™ &  
POWERPRO™ Swim Spa:  
230V / 50 HZ / 40A**

**230 VOLT 50 Hz**  
**THREE PHASE**  
**RCD WIRING**  
**(DUAL SPA PACKS)**

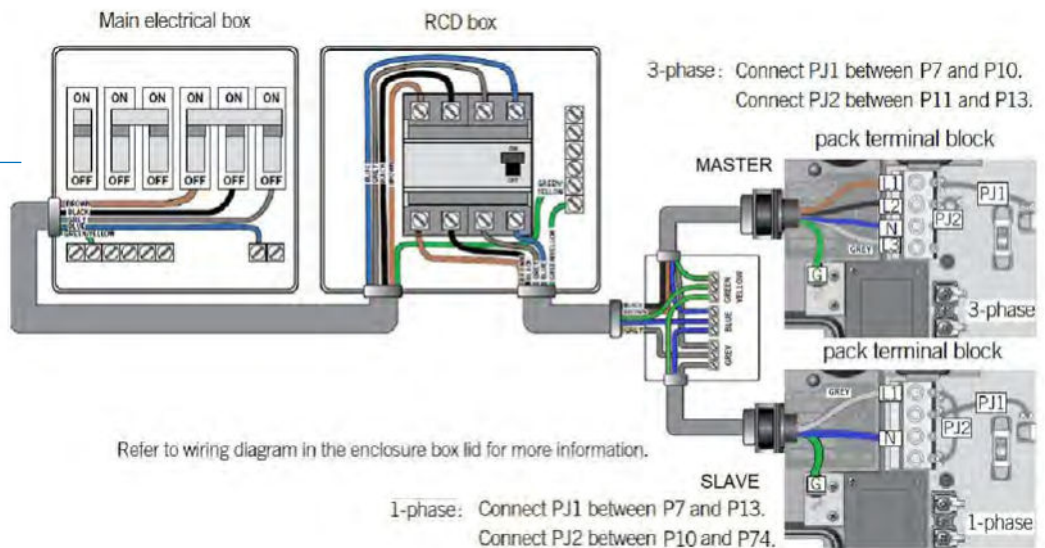

## 2.5 European R.C.D. Installation

### IMPORTANT NOTE:


Installation of the R.C.D. - Circuit Breaker; including ampere sizing, GFCI Security Breaker and selection of conductor size and type, must be performed by a qualified electrician in accordance with National, Regional and Local Codes and Regulations in effect at the time of installation.

### EUROPE:

#### OPTION ONE:

J-19DT POWERACTIVE™ & POWERPRO™ Swim Spa:  
230V / 50 HZ  
20A Hot Tub / 40A Swim Spa


**230 VOLT 50 Hz**  
**SINGLE PHASE**  
**RCD WIRING**  
(MASTER ONLY/  
POWERACTIVE™  
& POWERPRO™  
HOT TUB END)

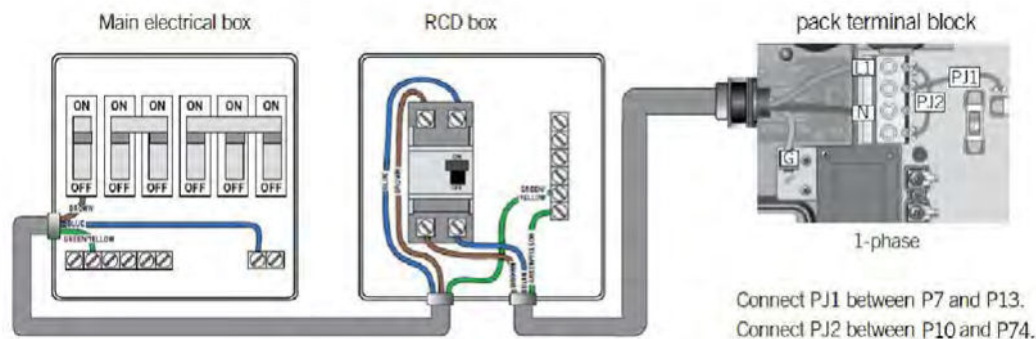

#### OPTION TWO:

J-19DT POWERACTIVE™ & POWERPRO™ Swim Spa:  
230V / 50 HZ  
20A Hot Tub / 40A Swim Spa


**230 VOLT 50 Hz**  
**SINGLE PHASE**  
**RCD WIRING**  
(DUAL SPA PACKS)

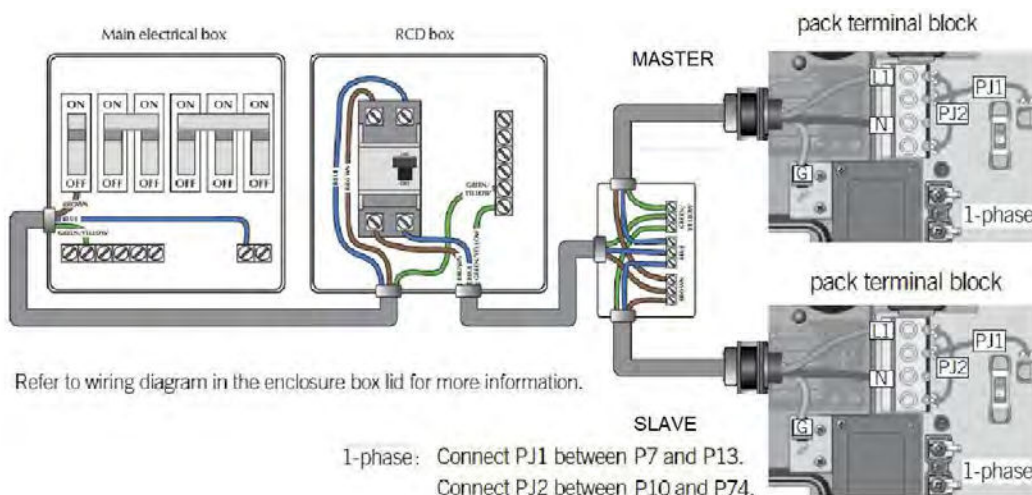

#### OPTION THREE:

J-19DT POWERACTIVE™ & POWERPRO™ Swim Spa:  
230V / 50 HZ  
20A Hot Tub / 40A Swim Spa

**230 VOLT 50 Hz**  
**THREE PHASE**  
**RCD WIRING**  
(DUAL SPA PACKS)

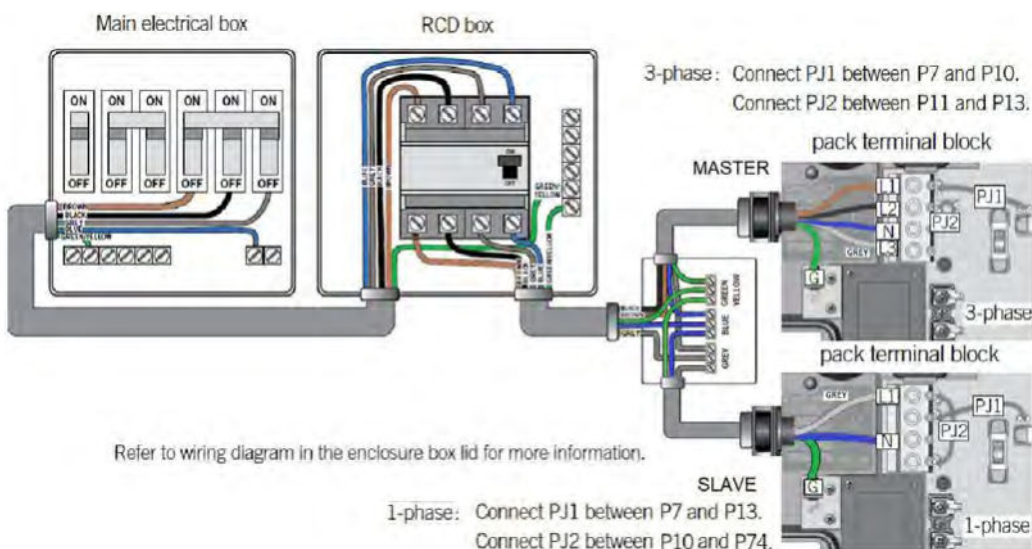

# 3 Delivery & Handling Considerations

## 3.1 RETAILER DELIVERY

All Jacuzzi® swim spas are shipped with a layer of protective foam wrap, plastic film and cardboard for added protection. Each swim spa is shipped from the factory strapped onto a wood skid. If your swim spa is to be delivered by your local Jacuzzi® retailer, it will generally arrive on a flat bed truck or low profile trailer. Typically, the dealer will arrive with the necessary equipment to maneuver the swim spa from the truck. The swim spa can then be lifted by a crane into place.

## 3.2 DIRECT DELIVERIES

Like the retailer delivery, your swim spa will come wrapped and skidded the exact same way, however, your swim spa may arrive on a 48 ft. or 53 ft. common carrier closed box trailer. You can arrange the exchange at a local cross docking facility to a flatbed truck. The swim spa can then be lifted by a crane into place.

## 3.3 CRANE DELIVERIES

Most installations require the use of a crane. When a crane is used for lifting, place the straps under the swim spa, ensuring that the plumbing lines and fittings are not stressed and / or damaged and a spreader is used. The straps should be secured so that they will not slip in any direction and strap spreaders utilized to prevent undue structural side load on the swim spa shell.

## 3.4 FORK LIFT DELIVERIES

If you are removing the swim spa using a forklift, please make sure to use 10' / 3 m extended forks and pick up swim spa at the equipment end.

## 3.5 ROLLER DELIVERIES

Although it is recommended to install your swim spa by crane, it may be pushed along rollers by 10 to 12 able-bodied adults (see image).

If rollers are to be utilized, we recommend that at least six 4" / 10 cm diameter pipes, 8' / 2.5 m long, be placed under the shell to move it across a soft lawn, down a path, etc.

## 3.6 WARNINGS!

- Do not move or place the swim spa on its side.
- Never lift or handle the swim spa by its plumbing.
- The swim spas dry weight is in excess of 4,000 lbs / 1,815 kg.
- Please ensure lifting equipment is sufficient for the job. Manually lifting of the swim spa should be done with the proper manpower.
- We strongly recommend the installation to be done by a Jacuzzi® Dealer.

### 3.1 Retailer Delivery



### 3.3 Crane Deliveries



### 3.4 Fork Lift Deliveries



### 3.5 Roller Deliveries



## 4 Base of Support – Load Specifications

### 4.1 Preparation

Installation of a level concrete pad is mandatory.

Dig out and level the ground 8 -12 in. (20 - 30 cm) below your desired base level. Install 8-10 in. (20 -25 cm) of crushed stone. If there is a possibility that the pad could shift by freezing/thawing ground movement (such as in clay regions, and/or areas with high water tables) concrete footings extending below the frost line are recommended.

### 4.2 Concrete

Install 4 - 6 in. (10-15 cm) of poured concrete. The concrete support slab must be flat and level in-order to properly level the swim spa during installation. The concrete pad should be slightly larger than the dimensions for the swim spa, but it may be expanded even further for design esthetic or to allow more space for walking around the swim spa. Ensure that your concrete pad is capable of supporting design 250 lbs./ft<sup>2</sup> (1500 kg/m<sup>2</sup>). If the swim spa is purchased with steps your concrete pad should be made large enough to accommodate the size of the steps.

### 4.3 Second Level / Balcony Installation

You must know the load tolerance and compare it to the weight of the swim spa filled with water and people. When in doubt, a load distribution assessment carried out by an engineer should be consulted, who can guarantee the best location choice. Ensure that your second level balcony is capable of supporting 250 lbs./ft<sup>2</sup> (1500 kg/m<sup>2</sup>). While swimming, the motors and water flow in all swim spas generate vibrations that are directly transferred to the base on which the swim spa is installed. These can therefore be felt in lower levels. In this case, the support area must be properly engineered. Install a floor drain in the event there are any problems with the plumbing to sure that this water has a place to drain.

### 4.4 IMPORTANT: Swim Spa Frame Shim Installation (Applies to All Installations)

It is mandatory to have full support on all the gussets that are located on side of the swim spa to keep it level and prevent bowing of the swim spa shell. Always make sure that the slab is perfectly flat before having the swim spa installed. You can use a garden hose and spray water on the slab and look for water puddles. If there is formation of puddles, you must re-work the surface, by adding self-leveling concrete or by buffing down the un-even area. The tolerance for the shim under the gusset is 1/8" / .125" (3.175 mm). Anything greater than that may cause structural issues. When the swim spa is installed on the slab, locate the stickers or white lines on bottom of the swim spa frame to determine where to install the shim. The shims must be installed right under the gussets (the sticker or white line will appear in the center of the gusset, so it can be used as a guide to align the shim. **Note:** There are 2 to 4 gussets per side depending on the model.


Simply attempt to insert the shim under the frame by hand and then gently tap on it with a hammer to make sure that it is secure under the frame. If the shim will not slide under by hand then no shim is needed under that gusset. Proceed to the next gusset and repeat this process. Then with a utility knife cut the shim flush to the end of the frame. When all the gussets are sitting properly on the ground, you can start filling the swim spa. Every swim spa will be delivered with a package of shims in case they are needed.

**PLEASE NOTE:** You may not require any shim, if your slab is perfectly flat. If the frame makes perfect contact with the ground, you don't need to add the shim.




# Cross Section Side View of 2025 Jacuzzi® Collection of Swim Spas Installed Above Ground

## J-14 PowerActive™ / PowerPro™ Model Swim Spa:

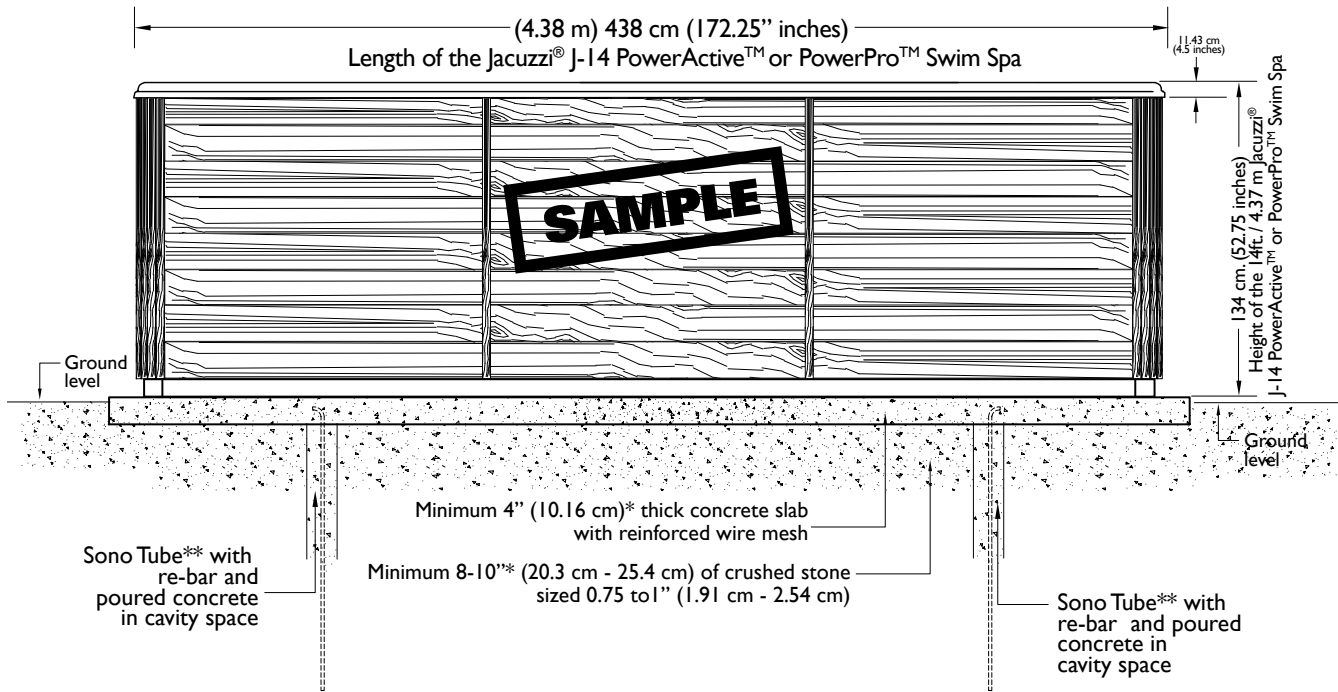


## J-16 PowerActive™ / PowerPro™ Model Swim Spa:

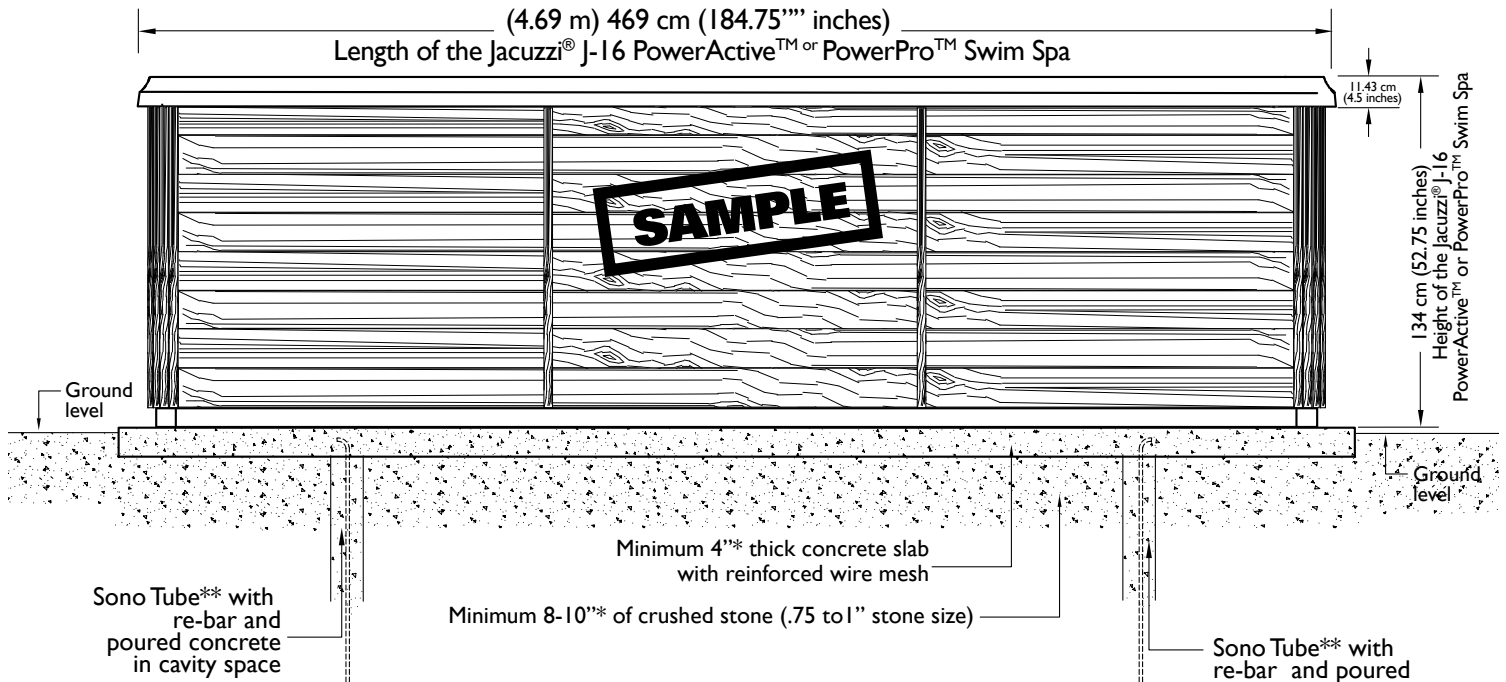


\* Hydropool Inc., can not be held liable for the accuracy of this drawing, it is purely provided as a guide only.  
As each Swim Spa installation has its own set of challenges and variations due to materials used and location of the install.  
\*\* Sono Tubes only required in installations that are in regions that experience freezing and thawing.

5.58 m / 558 cm (219.75" inches) Length of the Jacuzzi®  
J-19 PowerActive™ or PowerPro™ Swim Spa

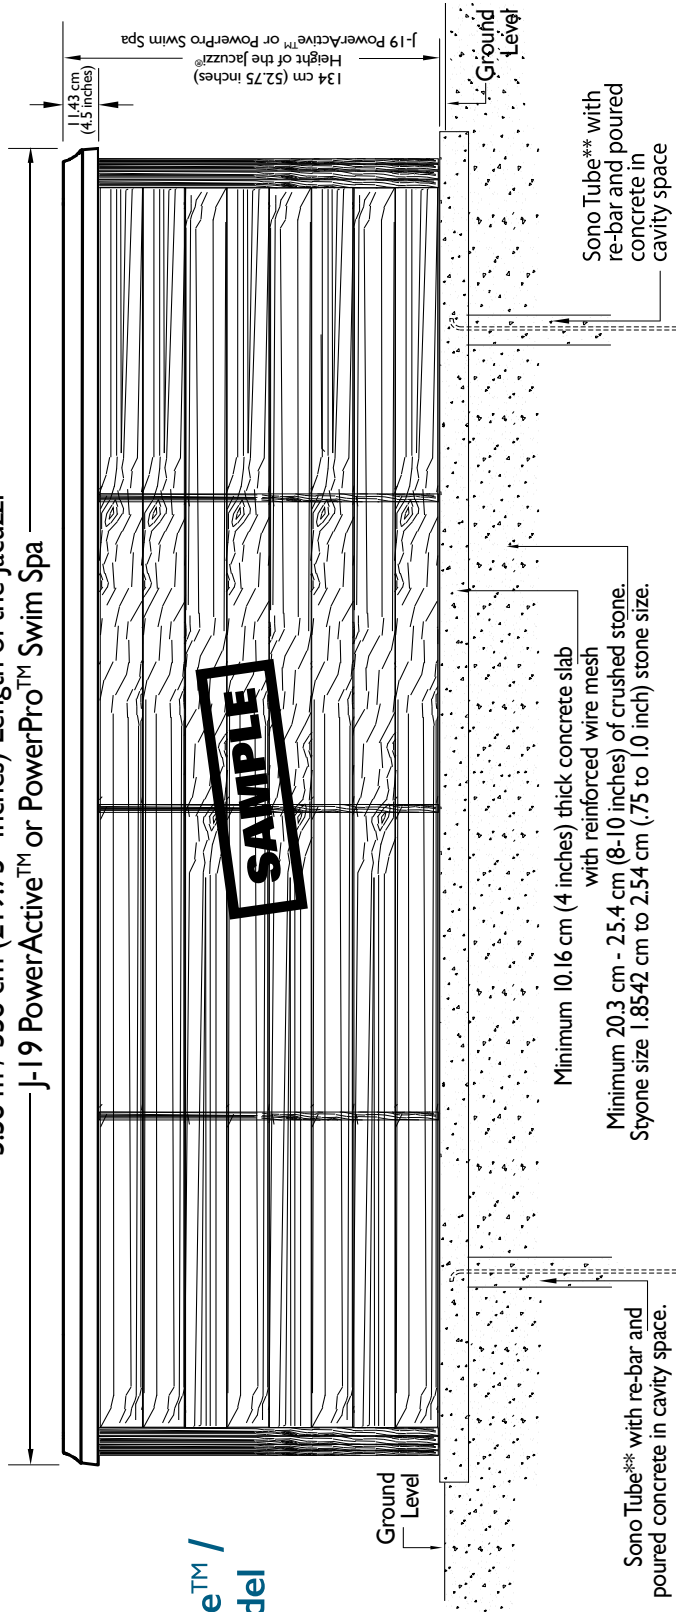


**J-19 PowerActive™ /  
PowerPro™ Model  
Swim Spa:**

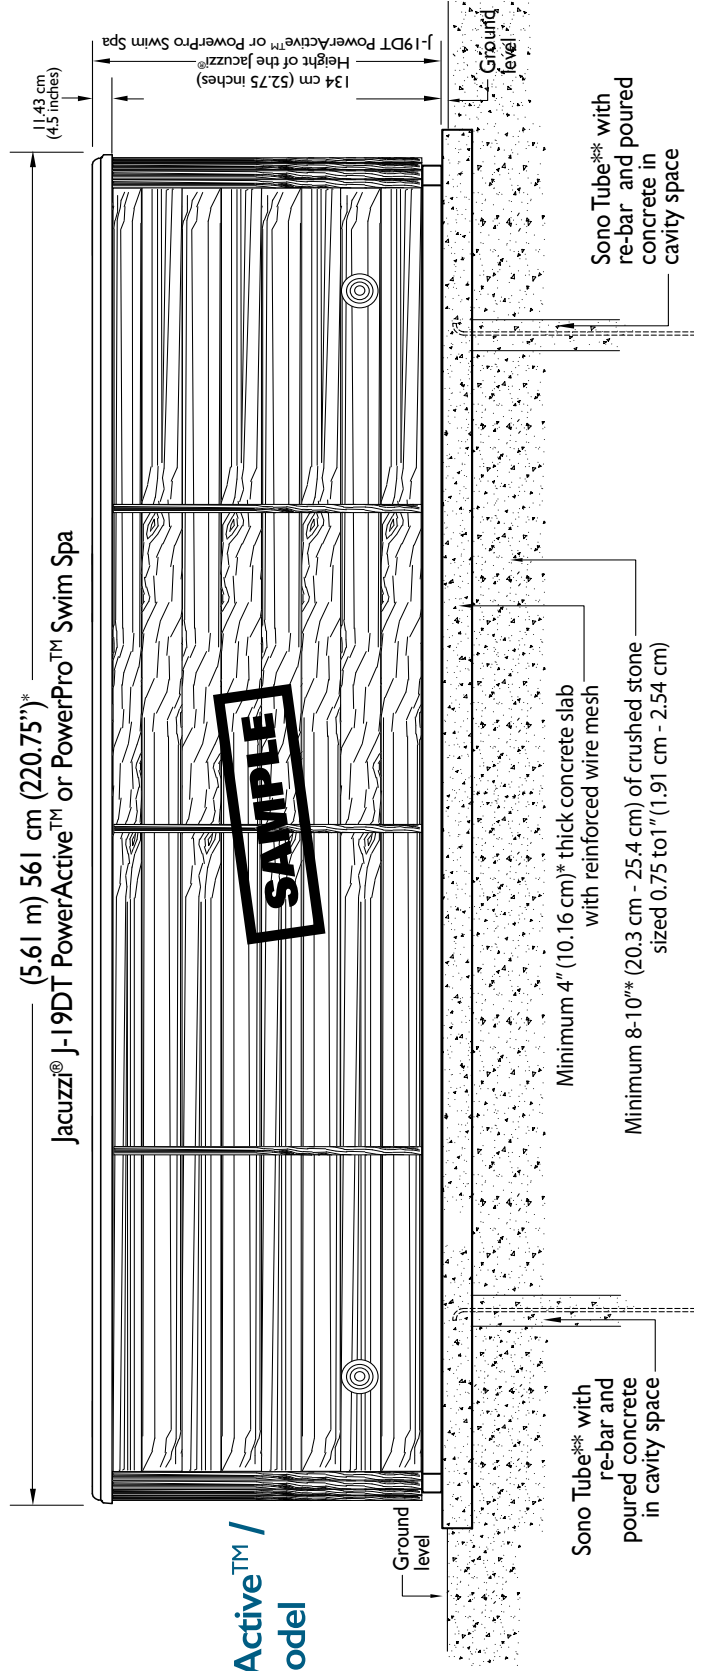


**J-19DT PowerActive™ /  
PowerPro™ Model  
Swim Spa:**

# Cross Section Topside View of 2025 Jacuzzi® Collection of Swim Spas Installed Above Ground


## J-14 PowerActive™ / PowerPro™ Model Swim Spa:

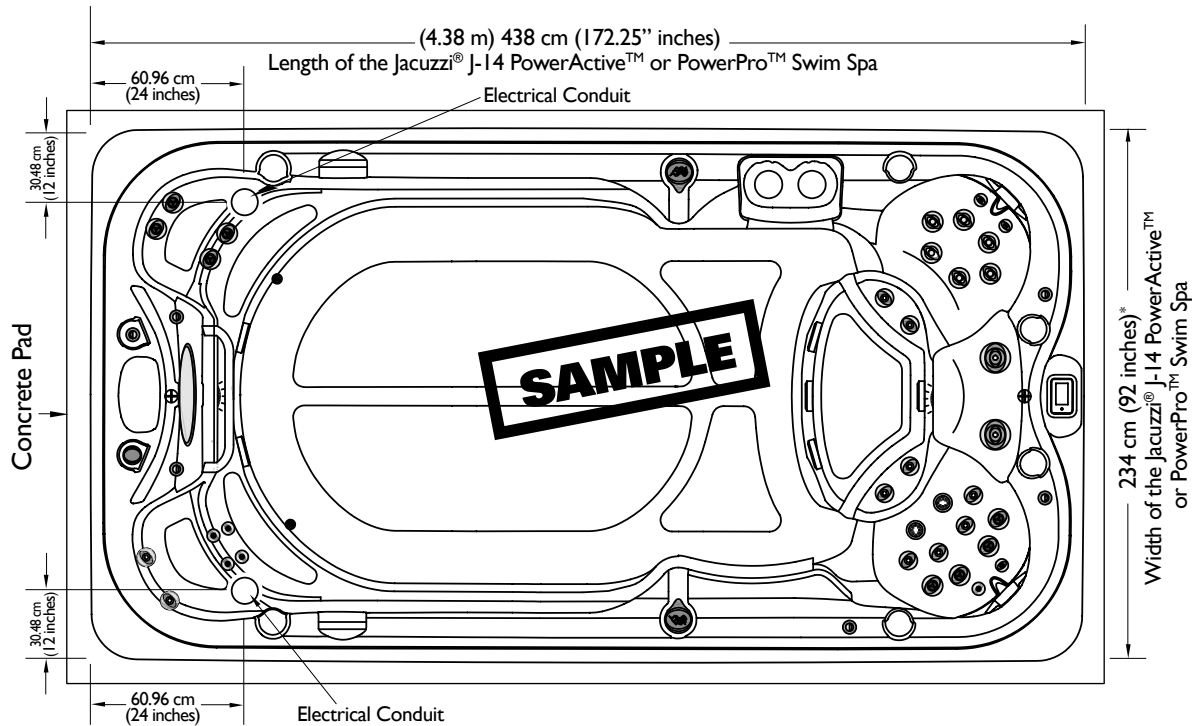


## J-16 PowerActive™ / PowerPro™ Model Swim Spa:

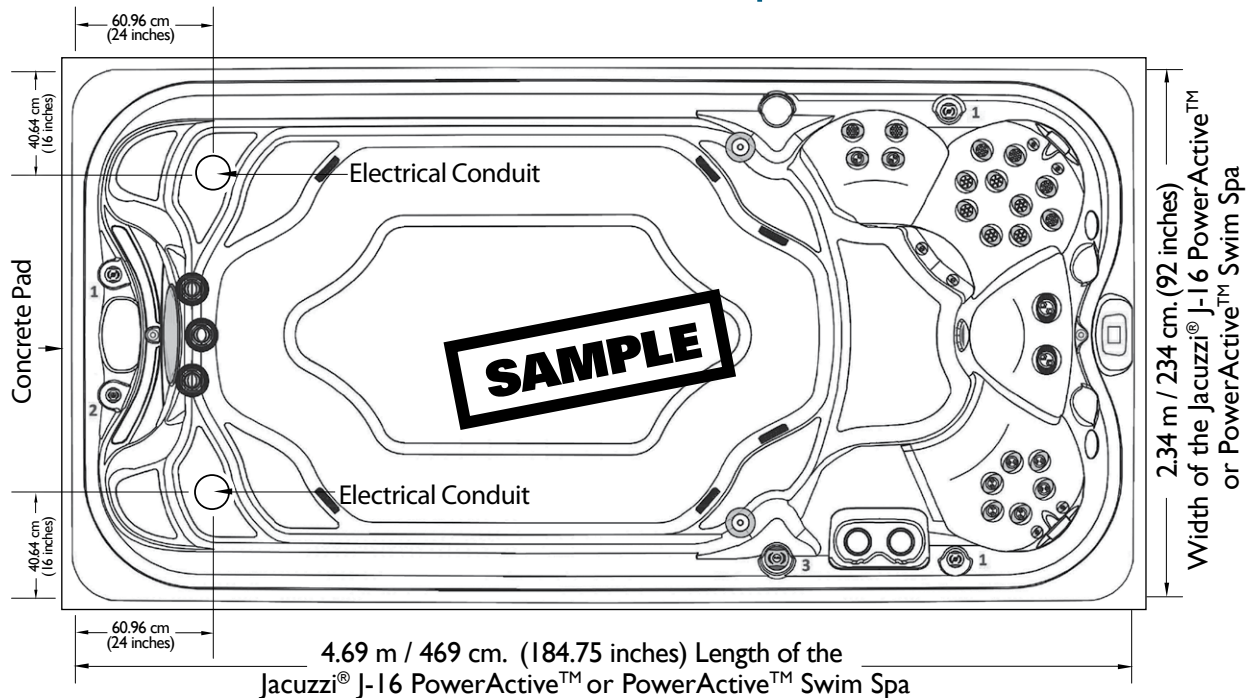

## J-19 PowerActive™ / PowerPro™ Model Swim Spa:

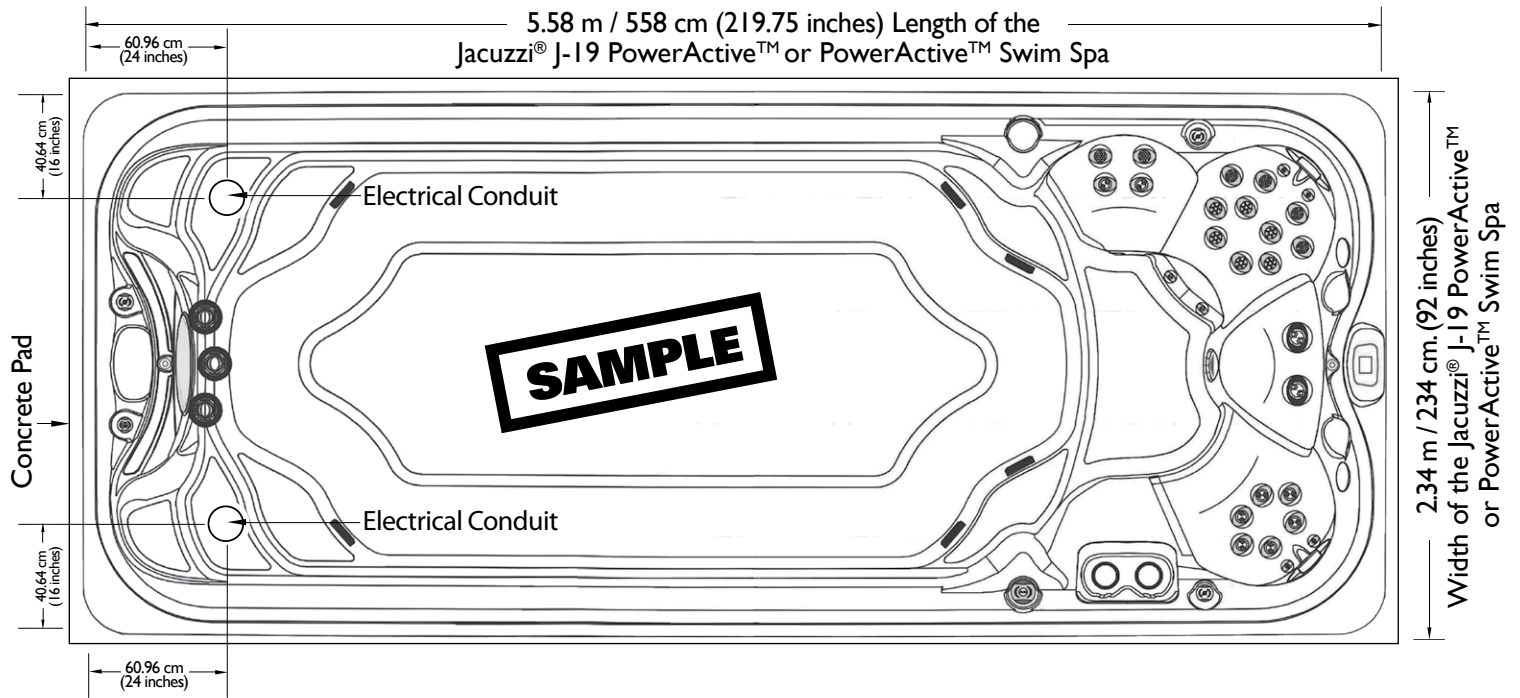

## J-19DT PowerActive™ / PowerPro™ Model Swim Spa:

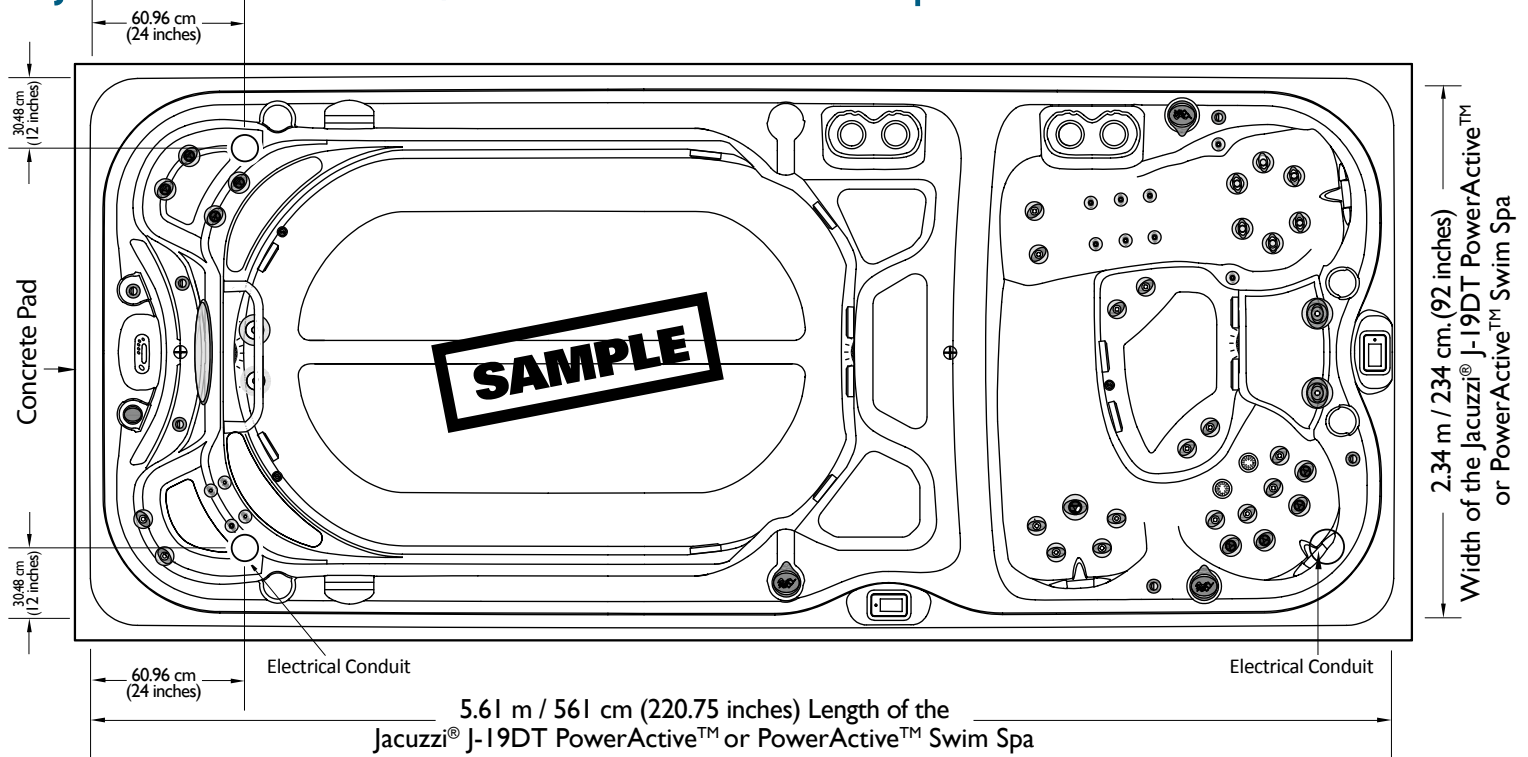

\* Jacuzzi® Swim Spas, can not be held liable for the accuracy of this drawing, it is purely provided as a guide only.  
As each Swim Spa installation has its own set of challenges and variations due to materials used and location of the install.  
\*\* Sono Tubes only required in installations that are in regions that experience freezing and thawing.

# 5 Below Grade or Partial In Grade Installations with Cabinet

## 5.1 Backfilling Exclusion

Backfilling any swim spas will void the warranty.

## 5.2 Excavation

Call before you dig! Please make sure you have any permits in place that are required from your municipality.

## 5.3 Vault/Bunker Specifications

When recessing the swim spa all or part way below ground level, a concrete base along with a concrete retaining wall to hold back the earth is required. This forms a vault or 'bunker', in which the swim spa is placed.

## 5.4 Base of Support

It is necessary that a concrete base be poured level and reinforced in order to support the swim spa. In addition, if you are in an area that experiences freezing and thawing concrete footings should be added as outlined in section 4 of this guide.

## 5.5 Crawl Space

It is recommended leaving a 24" (61 cm) wide crawl-space around the entire unit to ensure adequate accessibility on the all sides for service access. At the equipment end it is recommended to have a 3 ft. (90 cm) crawl space for work space.


## 5.6 Ground Water

The vault will be the lowest part of your backyard and therefore good drainage is essential. A properly designed drain system and sump pump complete with a float switch should be constructed as part of the crib and should be located at the equipment end of the swim spa. This should prevent flood damage from ground water that may enter the crib.




# Cross Section Topside View of 2025 Jacuzzi® Collection of Swim Spas Installed Inground


## J-14 PowerActive™ / PowerPro™ Model Swim Spa:

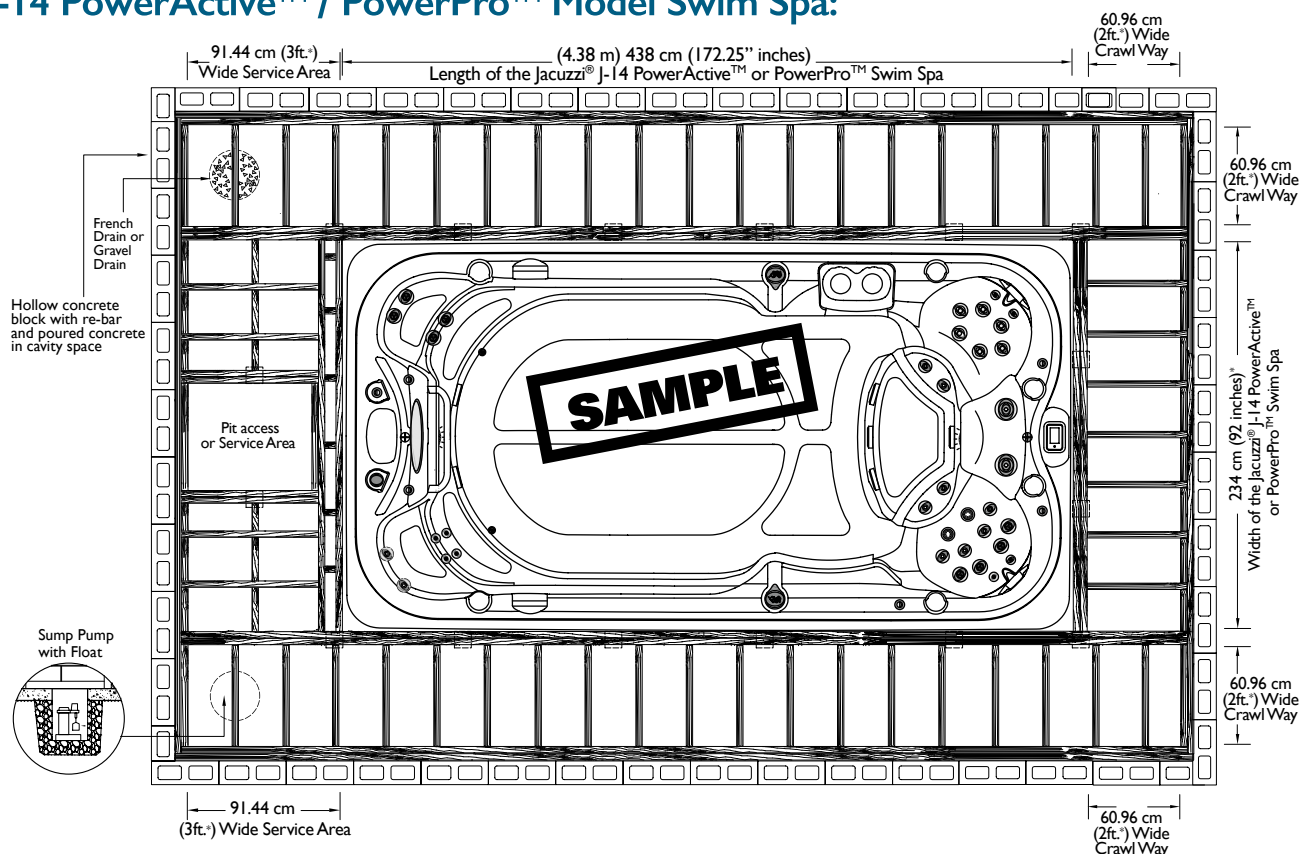


## J-16 PowerActive™ / PowerPro™ Model Swim Spa:

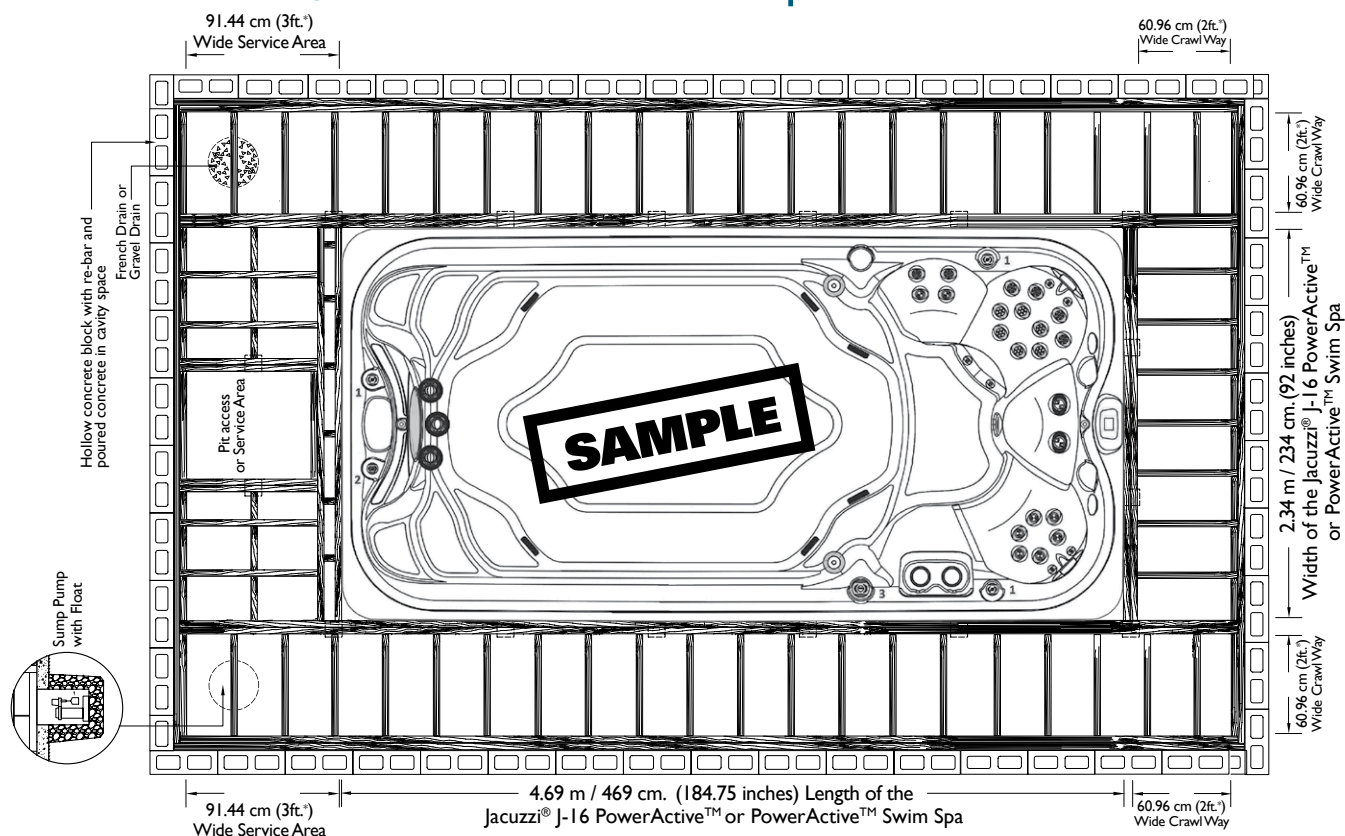


## J-19 PowerActive™ / PowerPro™ Model Swim Spa:

 

## Cross Section End View of 2025 Jacuzzi® Collection of Swim Spas Full Inground Installation

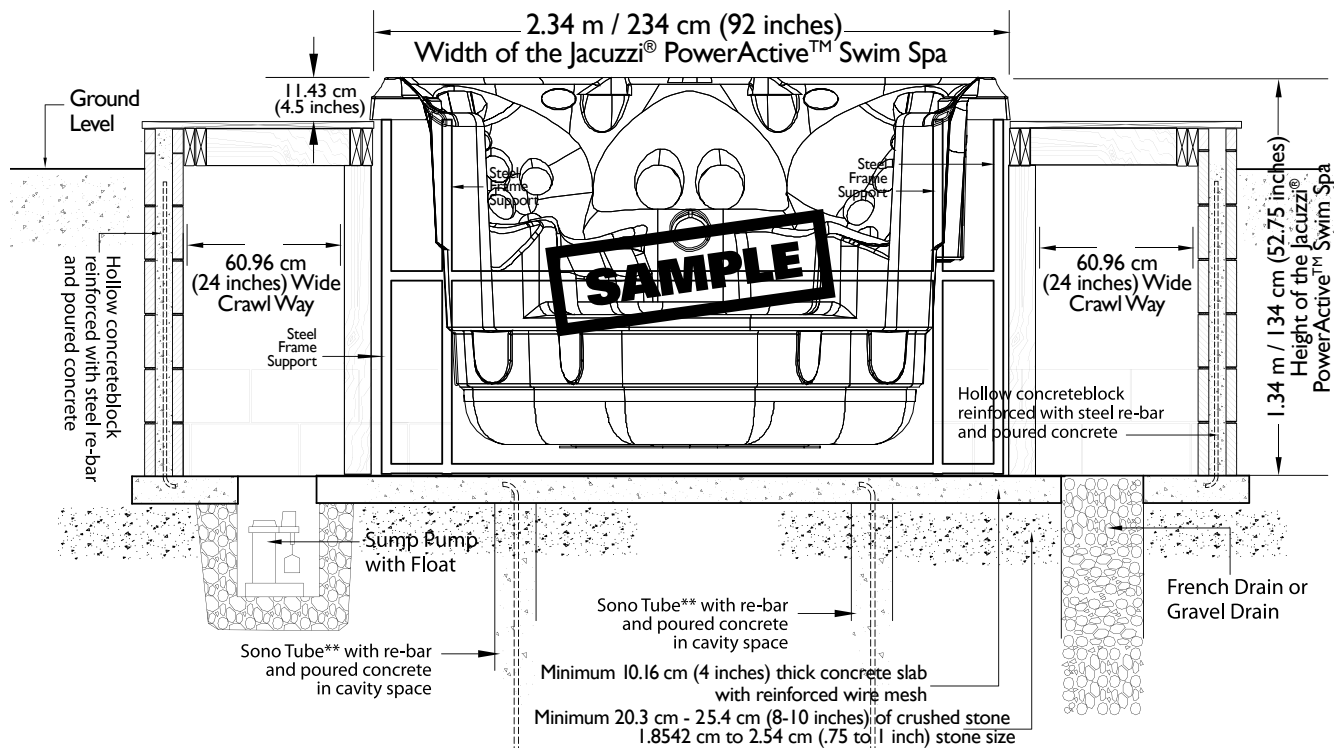


## Cross Section End View of 2025 Jacuzzi® Collection of Swim Spas Partial Inground Installation

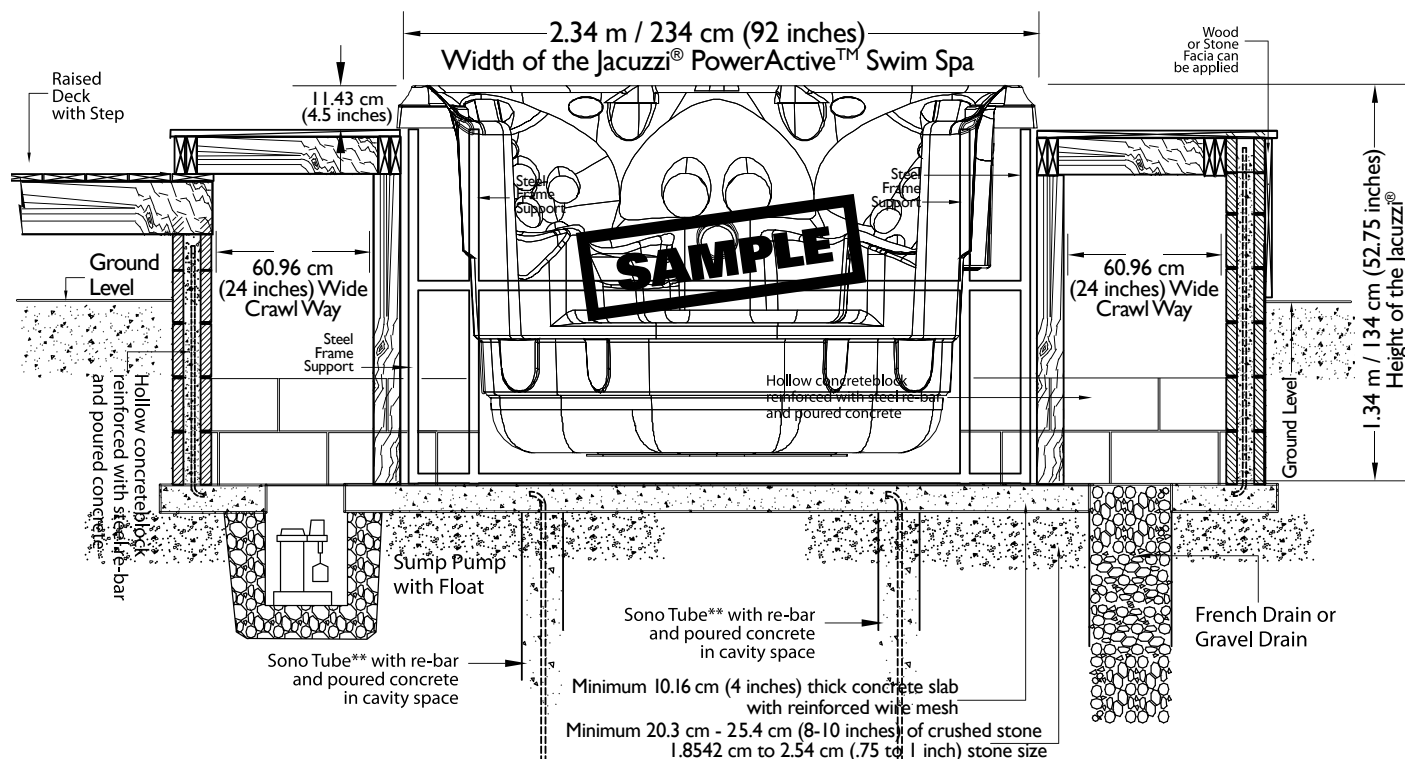


\* Jacuzzi® Swim Spas, can not be held liable for the accuracy of this drawing, it is purely provided as a guide only.  
As each Swim Spa installation has it own set of challenges and variations due to materials used and location of the install.  
\*\* Sono Tubes only required in installations that are in regions that experience freezing and thawing.

# Cross Section Side View of 2025 Jacuzzi® Collection of Swim Spas Installed Inground

## J-14 PowerActive™ / PowerPro™ Model Swim Spa:

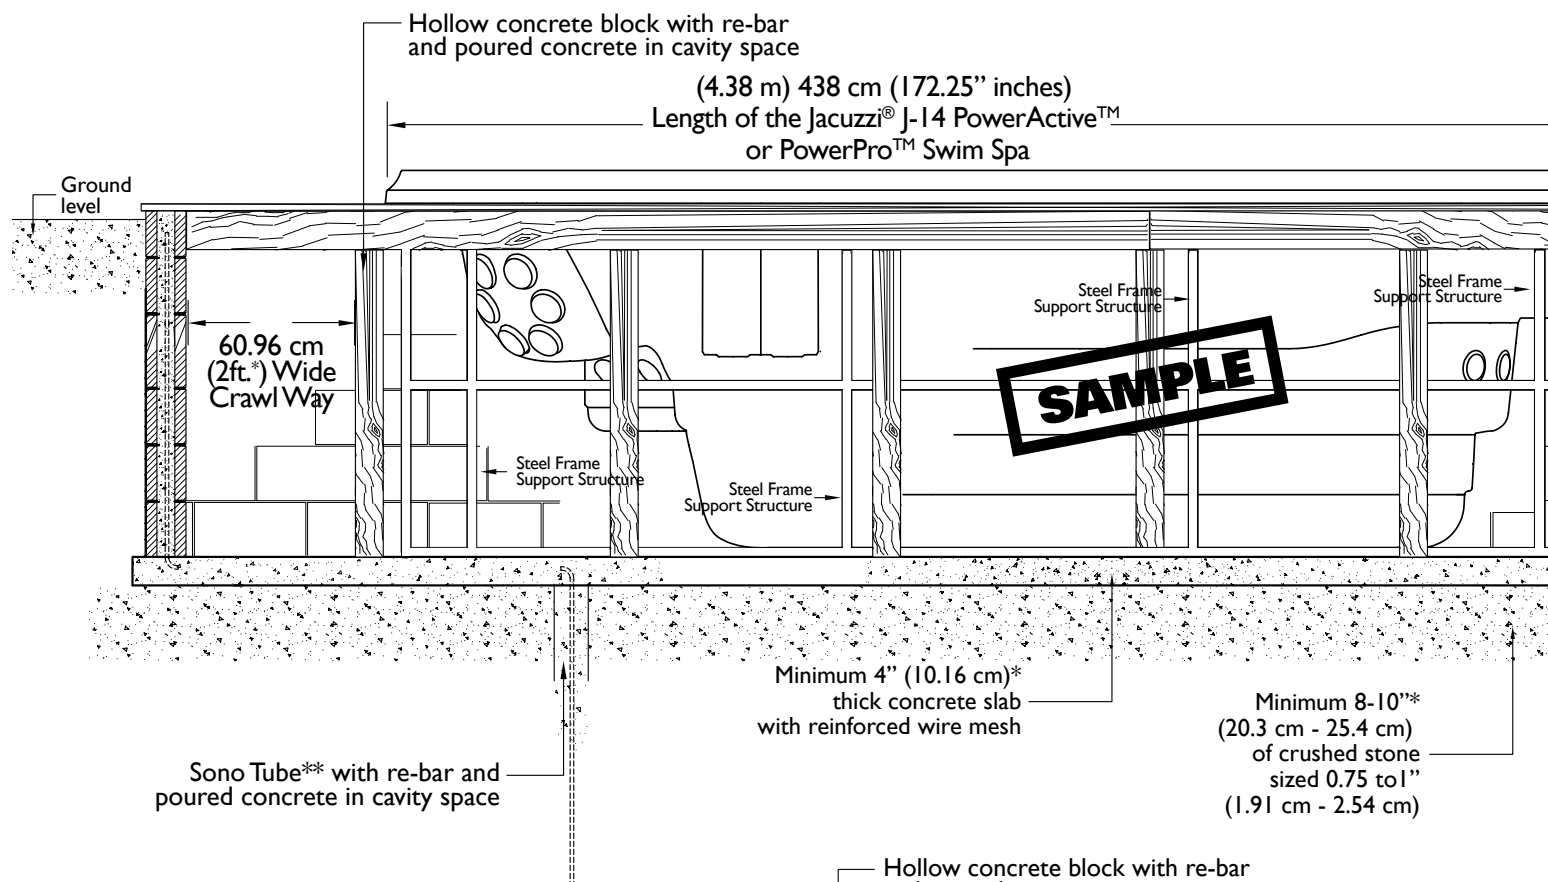

## J-16 PowerActive™ / PowerPro™ Model Swim Spa:

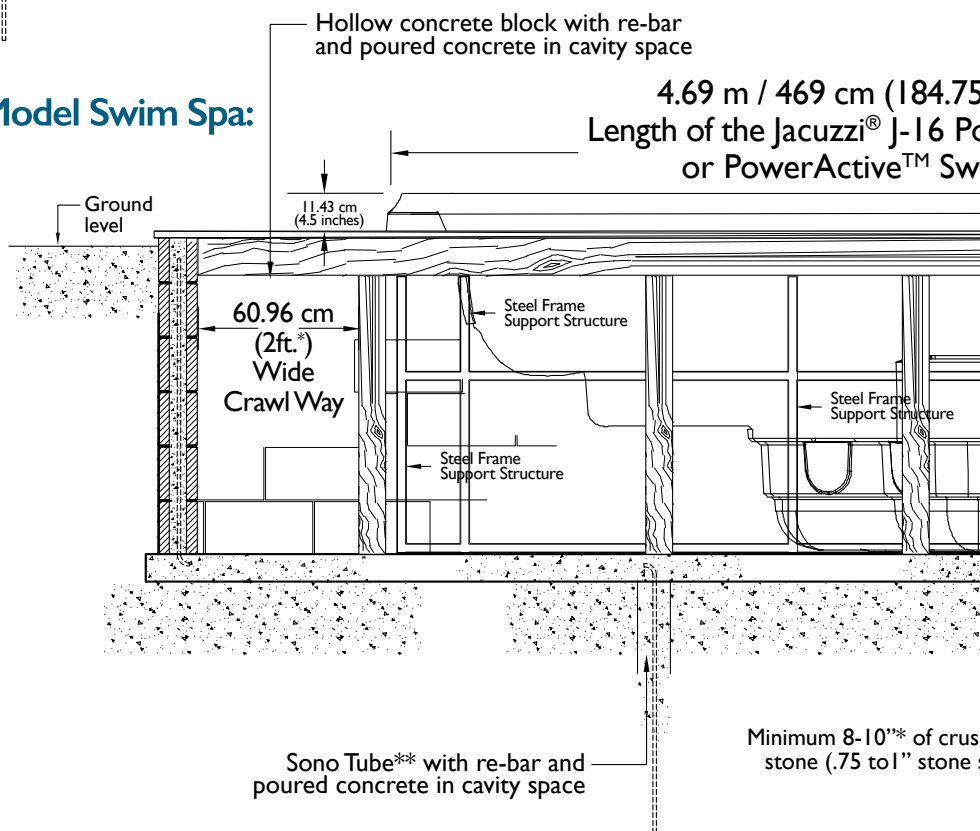


\* Jacuzzi® Swim Spas, can not be held liable for the accuracy of this drawing, it is purely provided as a guide only. As each Swim Spa installation has its own set of challenges and variations due to materials used and location of the install.

\*\* Sono Tubes only required in installations that are in regions that experience freezing and thawing.




# Cross Section Side View of 2025 Jacuzzi® Collection of Swim Spas Installed Inground Continued

## J-19 PowerActive™ / PowerPro™ Model Swim Spa:

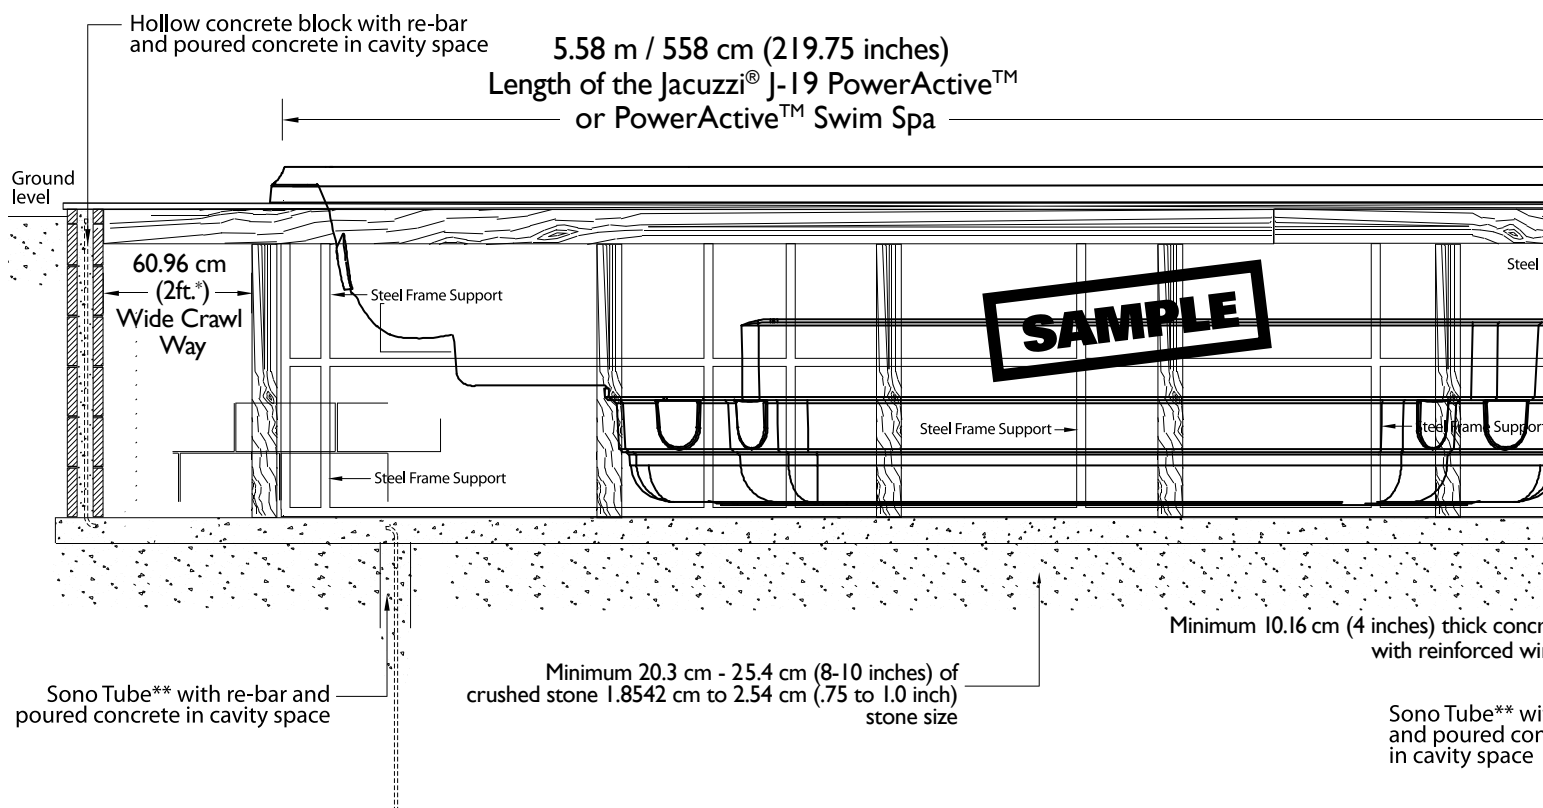


## J-19DT PowerActive™ / PowerPro™ Model Swim Spa:

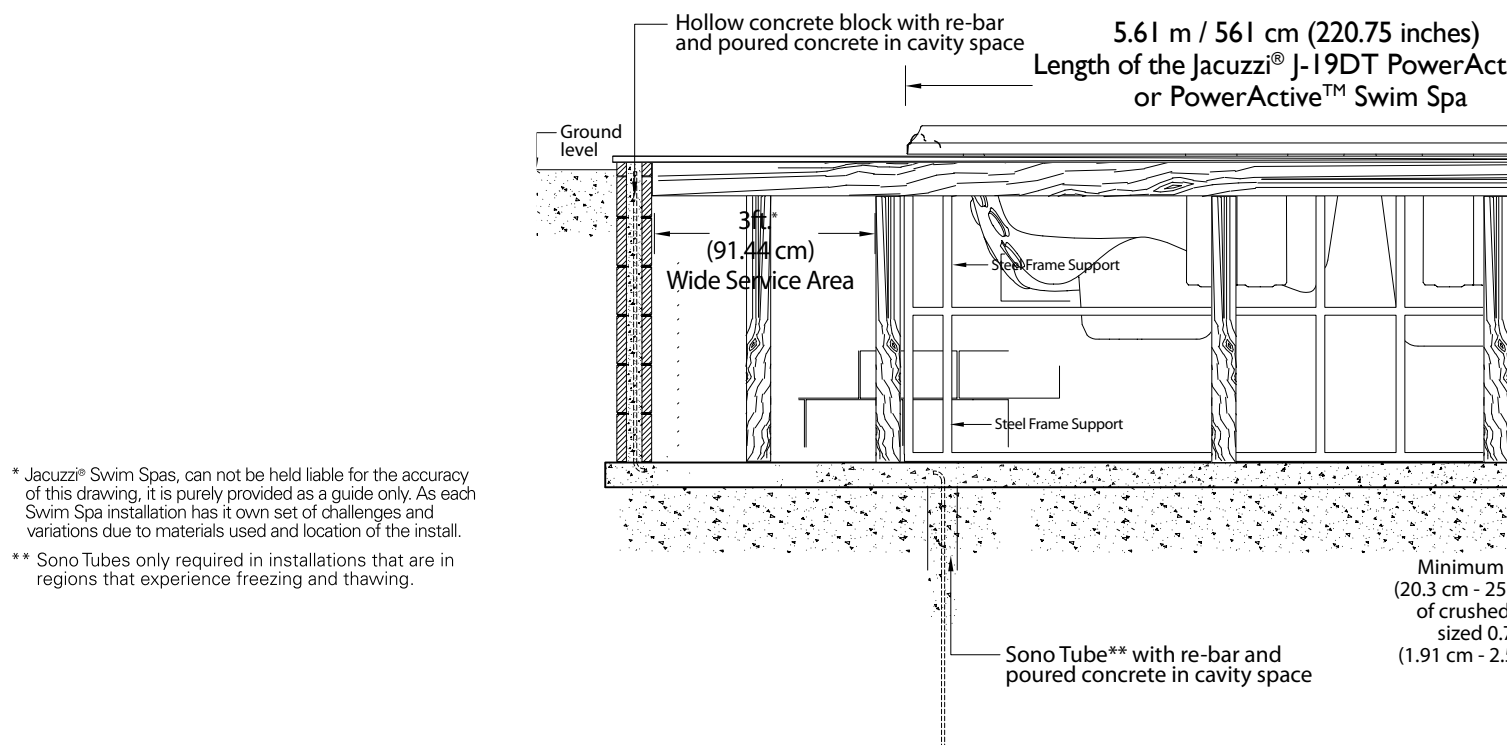

\* Jacuzzi® Swim Spas, can not be held liable for the accuracy of this drawing, it is purely provided as a guide only. As each Swim Spa installation has it own set of challenges and variations due to materials used and location of the install.


\*\* Sono Tubes only required in installations that are in regions that experience freezing and thawing.

Support posts for the Access Hatch sit between the French Drain and Sump Pump

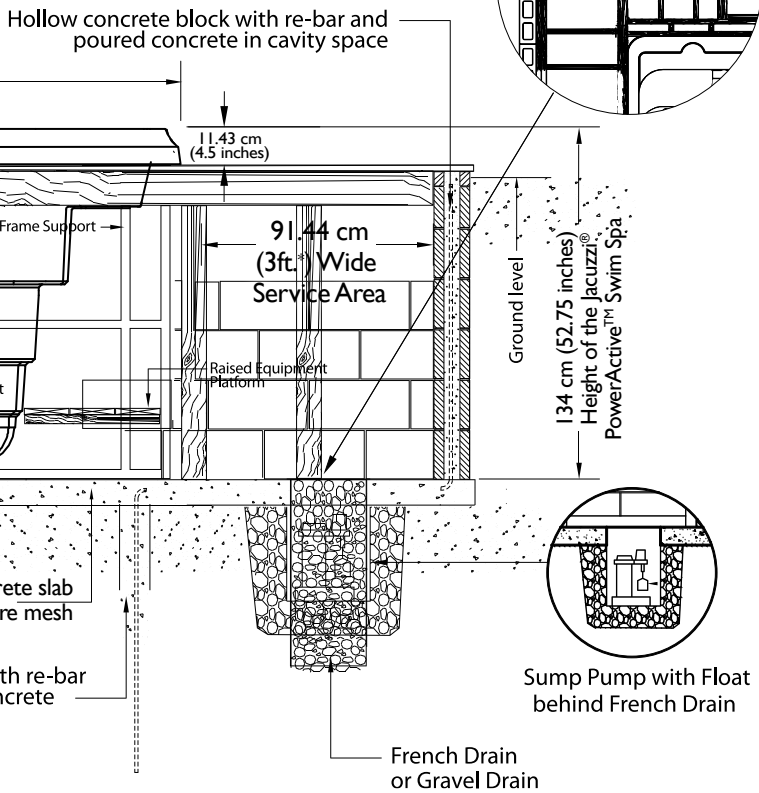

## NOTES:

Support posts for the Access Hatch sit between the French Drain and Sump Pump

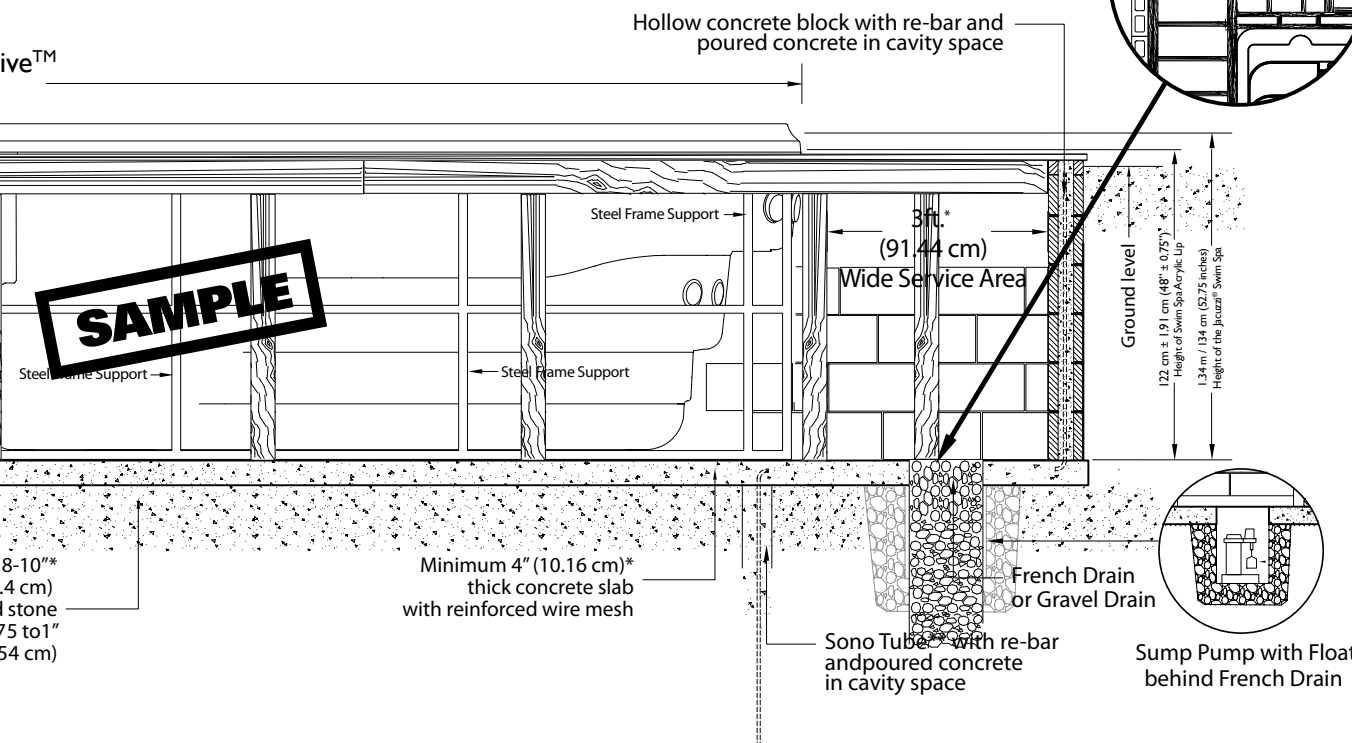

## 5 Below Grade or Partial In Grade Installations With Cabinet (Cont'd...)

### 5.7 Service Access

Future service must be considered at the time of design and installation. You must be able to access all sides and areas of your swim spa. Difficult access will result in supplemental service labour charges not covered by the factory warranty. Consider easily removable deck materials.

### 5.8 Water Test

During shipping and handling some of the components may have shifted. Please ensure the swim spa is tested for 48 hours before you prepare the installation of the surrounding/finish deck around your swim spa. Even though all units are tested in our plant, some transport/site handling damage may occur and we suggest you make sure the swim spa is perfectly waterproof before finalizing your installation.

### 5.9 Overall Support

Your Jacuzzi® Swim Spa is equipped with a factory installed load support substructure, which distributes the weight of the water over the entire foot print area of the swim spa. The supporting floor must be even and level. Although the lip of the swim spa must be supported to ensure it remains level, NEVER SUSPEND a swim spa from a deck or floor by the outer acrylic edge, as this will lead to product damage and/or serious personal injury.

### 5.10 Insulation

It is important to create a well-insulated vault when installing a swim spa in ground. This can be done a couple of ways:

- 1) Use insulated concrete forms when pouring the walls of the vault. This will accomplish two things, one it will provide the wall support needed to build a deck and two it will give the insulation required to keep the running costs to a minimum. Subject to above section 5.7 Service Access.
- 2) After installing the concrete block for the walls of the vault, add Styrofoam Blue insulation or Thermal Shield blanket to the interior walls to create well insulated area.

### 5.11 Set Up and Assembly

Once your swim spa is set into place, you can adjust the posts for levelling the swim spa and the equipment is already connected.

### 5.12 Equipment Protection

The equipment must be located in an area where it will remain dry and will not be exposed to rain, snow or ground water. When your swim spa is to be installed above ground, the factory cabinet is designed for both protection, insulation and accessibility. When your swim spa is to be installed fully or partially in the ground it is necessary that the equipment be installed in an area that remains dry, protected from the elements, has proper ventilation, and is easily accessible for service.



## 6 Serviceability, Accessibility and Protection

### 6.1 Equipment Protection

The equipment must be located in an area where it will remain dry and will not be exposed to rain, snow or ground water. When your swim spa is to be installed above ground, the factory cabinet is designed for both protection, insulation and accessibility.

When your swim spa is to be installed fully or partially in the ground it is necessary that it be installed in an area that remains dry, protected from the elements, has proper ventilation, and is easily accessible for service.

### 6.2 Serviceability

Ensure that access to the equipment, and the working area around the equipment, is large enough to accommodate a service person.

### 6.3 Rodent Protection

For any installation, protection from rodent infestation is imperative. If the swim spa is being installed with a cabinet, as long as your concrete pad is level there should be no need for any further protection against rodents.

However, if the swim spa is being installed in ground it is important to take the precautions required to make sure rodents don't make a home in your vault area.

Protect access points and repair if needed.



6.1 Accessibility



6.2 Serviceability

This image is an example of a Swim Spa Service Bunker only and does not represent a Jacuzzi® Swim Spa Installation.

## 7 Filling and Draining

### 7.1 General Considerations

- Be sure to check with your local by-laws regarding disposal of waste water from your swim spa.
- Avoid filling with soft or well water.
- Filling through the skimmer is optimal for reducing/eliminating any air locks.

### 7.2 Indoor Installations

There will be water lost in the swim spa due to splash out, hence, you will need to top up the swim spas periodically. When building the room for the swim spa consider plumbing a water tap location nearby to facilitate filling. You will need to drain your swim spa periodically, so please make sure to install a drain in the room that can handle the volume of water in a swim spa.

### 7.3 Outdoor Installations

Draining and filling is easy with an outdoor swim spa. Use a garden hose to fill the swim spa and use the hose provided to drain it. Do not plumb a permanent fill or drain line to the swim spa if you are in an area where the temperature drops below freezing.

## 8 Auxiliary Heating Options

### 8.1 Gas Heaters

There are a number of different ways to heat your swim spa using the Auxiliary Heating Option, the most common is using a gas heater. The most common size used for our swim spas is 100,000 BTU/30 KWH .

### 8.2 Other Methods Are Heat Pumps, Geothermal Heating and Solar Heating

Please consult your local retailer for more information on these alternative methods to heat your swim spa.

### 8.3 Auxiliary Bypass

The Auxiliary Bypass is standard and can help to facilitate any of the above installation options.





## 9 Humidity, Ventilation, and Other Indoor Considerations

### 9.1 Humidity

All swim spas emit quantities of moisture into the surrounding air. In fact, evaporation will increase proportionally with the difference between the temperature of the surrounding air and of the water. To prevent this from happening, heat the air to more than 79° F/26° C if the swim spa is located inside a dedicated room. This will make soaking more comfortable and will limit evaporation.

### 9.2 Ventilation

If the swim spa is being installed indoors, the swim spa room should have a window, and a humidistat controlled exhaust fan for ventilation. Some rooms may require a mechanical air extraction system in order to potentially dehumidify the air during and after swimming. Consult your local building codes.

### 9.3 Covers

If you decide to purchase the hard cover, put it on when you are not using the swim spa. This will reduce evaporation and limit your water heating costs. Use your hard cover as much as possible or purchase a floating summer cover for easy use.


### 9.4 Floor Drainage

It is very important to install a non-slip surface/tile for your indoor installation as the floors will become very slick with water on it. It is also important to install floor drains around the swim spa to help with the splash out.


#### 9.2 Ventilation



#### 9.3 Hard Cover

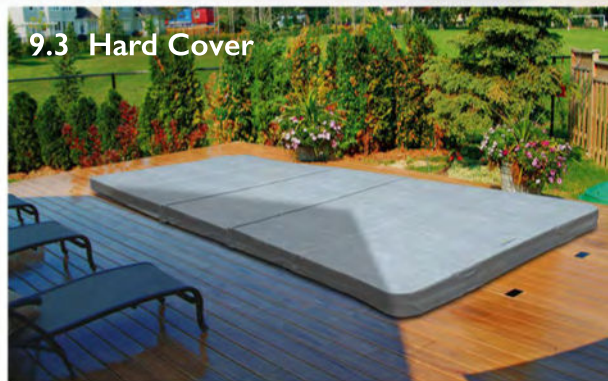

#### 9.3 Floating Cover

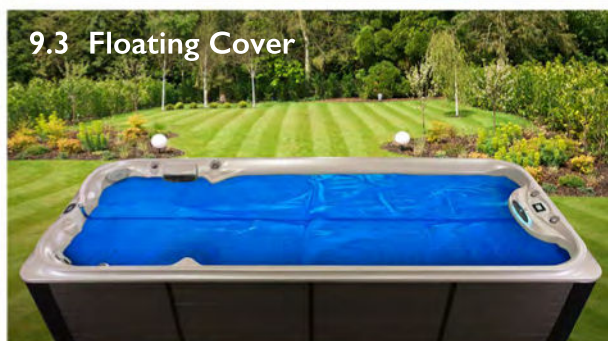

#### 9.4 Floor Drainage



## 10 Hard Cover Storage

### 10.1 Hard Cover

If your swim spa comes with a hard cover, make sure to prepare storage area for when the swim spa is being used. The swim spa cover comes standard in a number of sections that are secured together with hook and loop, depending on the size.

### 10.2 Pool Shed

Storing the cover in a pool shed is the most common way to keep the cover safe and out of sight.

## 11 Bylaws and Disclaimers

### 11.1 Building Code

Contact your local building code department to determine if a building permit is necessary and for information on applicable bylaws (distance from property lines, buildings, fencing requirements, etc.).

### 11.2 Excavation

Prior to any excavation contact your local gas, electric, and cable company to ensure that there are no underground lines.

### 11.3 Recommendations and Preparation Guidelines

This is an integral part of your order, and it contains the recommendations and guidelines for preparing your work site. It is important that the Project Manager overseeing inspection and installation of the swim spa, as well as placement of the swim spa, takes the time to carefully read this document.

### 11.4 Professionals

**Attention:** You must enlist professionals to complete the preparation work, and provide a copy of this document to each of them. This work will be carried out under their responsibility. Furthermore, if you plan to use a delegated Project Manager, you must also provide him or her with this document, and we recommend that you ensure its proper care in order to guarantee compliance with the regulations. Of course, we are available to answer all of your questions regarding the installation of your spa. The specifications described in this document are intended for professionals and are for informational purposes only. The Project Manager must consider these specifications while performing the work in accordance with the regulations and standards for the specific model.

### 11.5 Sunlight

**DO NOT** leave the swim spa out in the sunlight for extended periods of time with no water. The cabinet may bend slightly if exposed to sunlight for extended periods of time or the acrylic may crack.



10.1 Hard Cover



10.3 Pool Shed

**CAUTION:** Covers must be kept on the swim spa at all times when unit is drained or winterized. Direct exposure to sunlight can damage plastic parts and interior space, jets, or any interior components. Damage caused by exposure to sun will not be covered under warranty. Summer Cover does not qualify as a cover



[illegible]



# *Jacuzzi*<sup>®</sup> Swim Spas J-14 | J-16 | J-19 | J-19DT POWERACTIVE™ & POWERPRO™

---

## 2025 SWIM SPA INSTALLATION GUIDE

**CAUTION: THIS GUIDE IS FOR REFERENCE ONLY!**

All electrical installation must be completed by a qualified electrician in accordance with all National, Regional and Local Codes and Regulations in effect at the time of installation  
**JACUZZI HOT TUBS AND ITS AFFILIATES WILL NOT BE RESPONSIBLE FOR ANY ERRORS IN INSTALLATIONS OR CODE INFRACTIONS.**

EFFECTIVE DATE: January 1, 2025 (supersedes all others)

© 2025 Jacuzzi Hot Tubs. All rights reserved. Jacuzzi® is a registered trademark of Jacuzzi Inc.